



Operating Instructions
for
Non-Contact Radar Level Transmitter,
80 GHz – Integrated Design -

Model: NRE-7



We don't accept warranty and liability claims neither upon this publication nor in case of improper treatment of the described products.

The document may contain technical inaccuracies and typographical errors. The content will be revised on a regular basis. These changes will be implemented in later versions. The described products can be improved and changed at any time without prior notice.

© Copyright
All rights reserved.

1. Contents

1. Contents.....	2
2. Note	4
2.1 General	4
2.2 Hazard warnings.....	4
3. Instrument Inspection	5
4. Regulation Use	5
5. Operating Principle.....	5
6. Conditions of safe operation	6
6.1 Explosion Protection, Designation, Limit Values	7
7. Linearity error	8
8. Installation	8
8.1 Level measurement	8
8.2 Flow measurement	11
8.3 Wiring.....	11
8.4 User interfaces.....	12
8.5 BUS (HART®) communication	12
8.6 Commissioning and setting up	14
9. Programming	15
9.1 Configuring the measurement.....	15
9.2 Current loop output	20
9.3 Relay output (optional).....	22
9.4 Digital communication.....	24
9.5 Measurement optimization.....	24
9.6 Volume measurement.....	28
9.7 Open channel flow measurement	29
9.8 Output Conversion Table (OCT) programming.....	33
9.9 Service diagnostic parameters (read only).....	34
9.10 Flow measurement control parameters (read only)	34
9.11 Output control parameters (read only)	34
9.12 Hardware / Software versions (read only)	34
9.13 Service functions	34
10. Troubleshooting	36
10.1 Status and error indication in HART communication	36

10.2 Typical application errors	37
11. NUS-NTB-NRM-SW Instructions	37
11.1 Device Status Window	37
11.2 Echo Diagram oscilloscope function	38
11.3 Threshold settings	38
11.4 Threshold mask	40
11.5 The output conversion table (OCT) – (NUS-NTB-NRM-SW OC-Table)	41
11.6 Programming example 1 – configuring level measurement (using NUS-NTB-NRM-SW)	42
11.7 Programming example 2 – configuring the current loop output (using NUS-NTB-NRM-SW)	43
12. Parameter list	44
13. Maintenance, repair and storage conditions	45
14. Firmware update	45
15. Technical Information	45
16. Order Codes	45
17. Dimensions	45
18. Disposal	45
19. EU Declaration of Conformance	46
20. EU Declaration of Conformity (ATEX)	48
21. Ex ia Certificate	49

Manufactured and sold by:

Kobold Messring GmbH
Nordring 22-24
65719 Hofheim
Tel.: +49(0)6192-2990
Fax: +49(0)6192-23398
E-Mail: info.de@kobold.com
Internet: www.kobold.com

2. Note

2.1 General

Before unpacking and commissioning the device, the operating instructions and the “General Safety Instructions” document must be read and followed carefully. The general safety instructions, the operating instructions, the data sheet as well as approvals and further information can be downloaded via the QR code on the device or under the respective product on www.kobold.com.

Due to technical changes, the device documentation available online may not always correspond to the product version you have purchased. If you need an instruction manual that corresponds to the purchased product version, you can request it from us free of charge by email (info.de@kobold.com) in PDF format, specifying the relevant invoice number and serial number. If you wish, the operating instructions can also be sent to you by post in paper form.

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

The devices are only to be used, maintained and serviced by persons familiar with these operating instructions and in accordance with local regulations applying to Health & Safety and prevention of accidents.

When used in machines, the device should be used only when the entire machine fulfils the EU machinery directive.

2.2 Hazard warnings

The following instructions are intended to ensure your personal safety and to prevent damage to the product described or connected devices. Safety instructions and warnings to prevent danger to the life and health of users or maintenance personnel, or to prevent damage to property, are highlighted in this documentation using the symbols defined here. *The symbols and terms used have the following meaning in the documentation itself:*

Symbol	Explanation	Symbol	Explanation
 Note	Is important information about the product, the handling of the product or the respective part of the documentation to which particular attention should be drawn.	 Caution	Means that minor personal injury or minor property damage may occur if proper precautions are not taken.

Symbol	Explanation	Symbol	Explanation
 Warning	Indicates that serious personal injury or substantial property damage may occur if proper precautions are not taken.	 Danger	Means that death can occur if proper precautions are not taken.
 Warning	Attention: Hot surface!	 Warning	Warning: Dangerous electrical voltage

3. Instrument Inspection

Instruments are inspected before shipping and sent out in perfect condition. Should damage to a device be visible, we recommend a thorough inspection of the delivery packaging. In case of damage, please inform your parcel service / forwarding agent immediately, since they are responsible for damages during transit.

Scope of delivery:

The standard delivery includes:

Non-contact Radar Level Transmitter, 80 GHz

Model: NRE-7

4. Regulation Use

Any use of the device, which exceeds the manufacturer's specification, may invalidate its warranty. Therefore, any resulting damage is not the responsibility of the manufacturer. The user assumes all risk for such usage.

5. Operating Principle

The reflection of the millimeter-waves is highly dependent on the dielectric constant of the medium. Therefore, the measured medium's dielectric constant (ϵ_r) must be over 1.9 for millimeter-wave level measurement. The measurement principle of a level transmitter with a millimeter-waves signal is based on measuring the reflection's time of flight.

The speed of propagation of millimeter-waves signals in the air, gases, and vacuum is almost constant regardless of temperature and medium pressure, so the measured distance does not depend on the physical parameters of the intermediate medium.

The speed of propagation of millimeter-waves signals in the air, gases, and vacuum is almost constant regardless of temperature and medium pressure, so the measured distance does not depend on the physical parameters of the intermediate medium.

The NRE-7 level transmitter is a continuous-wave frequency modulated radar (FMCW) operating at 80 GHz (W-band). The most obvious advantages of 80 GHz radars over lower frequency (5 ... 12 & 25 GHz) radars are smaller antenna size, better focus, and smaller beam angle. A portion of the millimeter-wave continuous wave energy radiated by the level transmitter antenna is reflected from the measured surface, depending on the material to be measured. The distance of the reflecting surface is calculated with high accuracy by the electronics from the frequency shift of the reflected signal and converted into a distance, level, or volume signal by the electronics.

6. Conditions of safe operation

Compliance with technological process conditions

Make sure that all parts of the equipment that come into contact with the measured medium (sensor, seal, and fittings) meet the requirements of the process, such as the pressure and temperature generated during the process, as well as the chemical effects of the medium and the technologies used.

 Note	• The cable extending from the device must be fixed and relieved of any tension! • Use a junction box corresponding to the electrical classification of the environment to connect the wires! • The device may only be powered from a Category 1 (SELV/PELV) power supply unit!
---	---

Compliance with local rules and regulations

The NRE-7 is a Local Positioning Radar (LPR) and must be mounted in a fixed, antenna-down position. In addition, the following two restrictions on antenna placement and height from the ground must be observed:



- a separation distance of 4 km (2.48 miles) from radio astronomy sites operating in the frequency band 75...85 GHz, unless specifically authorized by the ruling national regulatory authority.
- At a distance of between 4 and 40 km (2.48 and 24.8 miles) from any radio astronomy site, the height of the radar above ground level must not exceed 15 m (49.2 ft).

Compliance with Ex requirements

- Intrinsically safe devices may only be operated from a circuit that complies with the technical data of the device and is marked [Ex ia IIC] or [Ex ia IIB].
- If the device is installed in a place subject to overvoltage, the device must be equipped with overvoltage protection of at least overvoltage Class II!
- The device may contain components capable of being electrostatically charged! The presence of electrostatic charges can cause sparks and ignition, so electrostatic charges must be prevented entirely in potentially explosive (Ex) atmospheres!
- The device must only be installed in an environment that is free from direct air currents and any other charging effects. Except in the case of application group III, if the conductivity of the particulate matter is greater than $>10^{-9}$ S (at $50\pm5\%$ relative humidity) or $>10^{-11}$ S (at $30\pm5\%$ relative humidity).
- Extreme care must be taken during maintenance when there may be explosive residue in the process tank. The device may only be touched in an explosive (Ex) environment with a wet antistatic cloth!

6.1 Explosion Protection, Designation, Limit Values

6.1.1 ATEX Intrinsically safe protection (Ex ia) – ATEX Certificate No.: BKI24ATEX0011 X

Ex marking (ATEX)	 II 1 G Ex ia IIC T5 Ga	 II 1 D Ex ia IIC T95°C Da
Ex power supply, intrinsically safety data ⁽⁹⁾	Ui = 30 V, li = 100 mA, Pi = 0,75 W	Ui = 30 V, li = 140 mA, Pi = 1 W
	Ci ≤ 12 nF + 0.12 nF/m cable, Li ≤ 238 μH + 0.65 μH/m cable with standard 5 m (16.4 ft) cable: Ci ≤ 12.5 nF, Li ≤ 242 μH	
Supply voltage	12...30 V DC	
Temperature limit data	See tables in section 6.1.2	


⁽⁹⁾ In IIB applications, Ex power supply data for IIC can be used.

6.1.2 Temperature limit data for ATEX (Ex ia) approved models

Temperature data	Hazardous gas atmospheres	Explosive dust atmospheres
	Ex ia IIC	Ex ia IIC
Temperature class	T5	T95°C
Highest ambient temperature	+80 °C (+176 °F)	+80 °C (+176 °F)
Highest surface temperature of the instrument ⁽¹⁰⁾	+80 °C (+176 °F)	+80 °C (+176 °F)

⁽¹⁰⁾ Conducted or radiated heat transferred by medium, ambient or process connection.

7. Linearity error

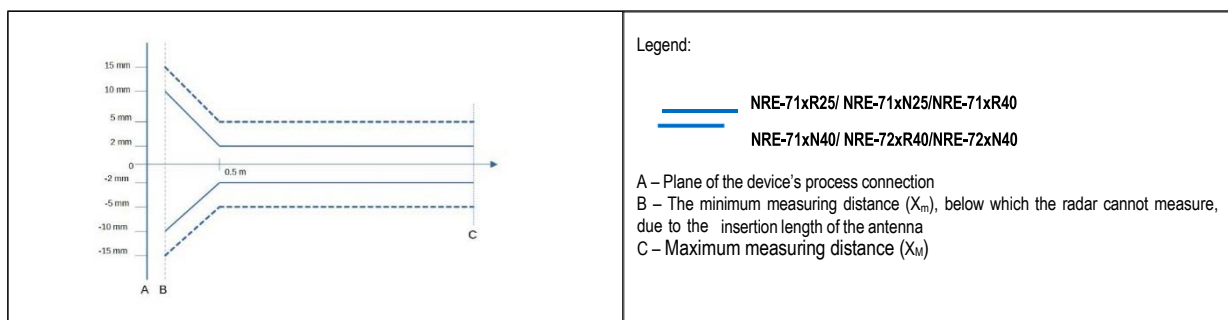


8. Installation

8.1 Level measurement

Location

The optimal location of the NRE-7 (cylindrical container) is on the radius $r = (0.3 \dots 0.5)$. In any case, it is advisable to consider the radiation cone angle. The surface of the liquid must be perpendicular to the axis of the device. Never place the device near the inlet. Improper placement may cause malfunctions.

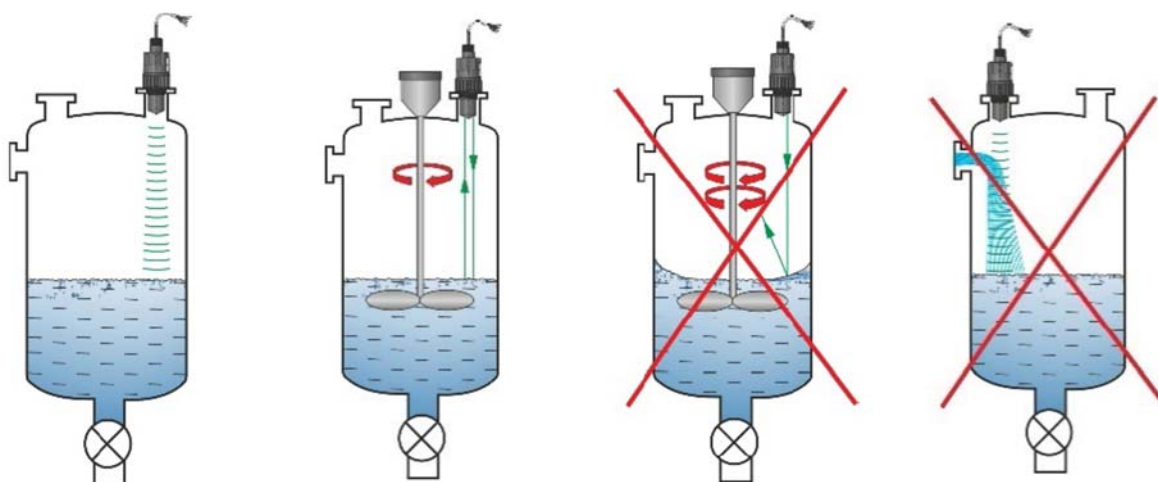

Obstacles


Objects (cooling pipe, ladder, stiffening structural element, thermometer, etc.) intruding into the beam must be avoided.

NOTE	Up to 4 interfering echoes can be blocked by programming in the NRE-7 threshold settings!
Note	




Aiming

The plane of the process connection must be parallel to the measured surface within a deviation of $\pm 2...3^\circ$.

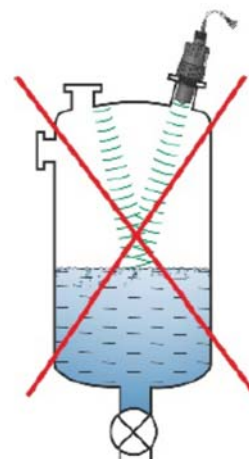

Gas/Vapour

In a closed (especially outdoors, exposed to sunlight) container, vapors/gases above the liquid can reduce the penetrating ability of the millimeter-wave signal.

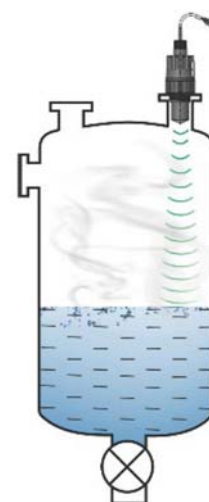


Empty Container

Especially in the case of tanks with a convex or conical bottom, or in the case of tanks with equipment (e.g., heating element, mixing paddle) at the bottom of the tank, the device may indicate an incorrect level when completely emptied.


The reason for this is that the tank bottom or the objects located at the bottom of the tank scatter and reflect the emitted millimeter waves to a certain extent, and the scattered radiation of a lower signal level in the tank can interfere with itself.

These interfering objects and a convex or conical tank bottom must be covered by at least 100 mm (3.9") of the liquid for a reliable measurement.

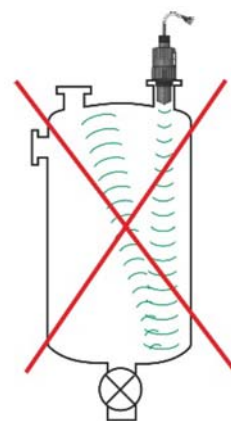


Temperature

The sensor must be protected from direct sunlight to avoid the temperatures higher than permitted.

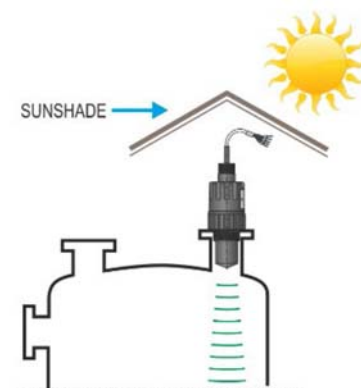

Foam

Foam on the measured surface may defeat the millimeter-wave level measurement. Therefore, if possible, the sensor must be installed in a place under which foam formation is the least.

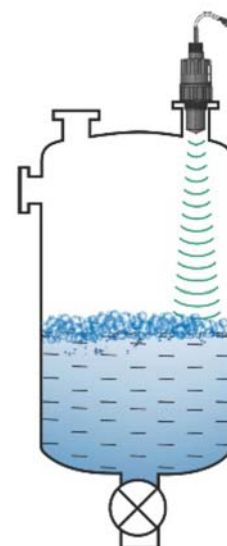


8.2 Flow measurement

- The device can measure flow in open channels with the flumes described in Chapter 9.7.
- The sensor must be placed as close to the surface as the maximum measured level and the dead zone of the sensor allow.
- The sensor must be placed in the longitudinal axis of the flume, at a location determined by the characteristics of the flume. This point is marked on the Parshall flumes sold by Kobold
- Foam may form on top of the flowing liquid, which may compromise the measurement. Therefore, the liquid's surface opposite the sensor face must be exposed for a suitable echo.
- The sensor must be fixed so that its position cannot change.
- The proper construction of the section before and after the measuring channel is extremely important for an accurate measurement.
- The measurement accuracy based on volume flow change depends on the size and shape of the flume (channel, valve) used and the surface of the flowing liquid (rippling, foaming). Therefore, flow measurement accuracy inevitably falls short of level measurement accuracy.
- The sensor must be protected from direct sunlight with a shielding roof to avoid temperatures higher than permitted.

8.3 Wiring


- Check that the terminals of the already installed terminal box are not energized.
- Connect the wires of the device as shown in the diagram. Pay attention to the polarity: (+) brown, (–) white. (For cabling, it is recommended to use $2 \times 0.5 \text{ mm}^2$ ($2 \times 20\text{AWG}$) twisted-pair shielded cable or $5 \times 0.5 \text{ mm}^2$ ($5 \times 20\text{AWG}$) for the optional relay).
- When connecting the shielding, make sure that there is no ground loop.
- After the device is powered on, the necessary programming can be carried out.

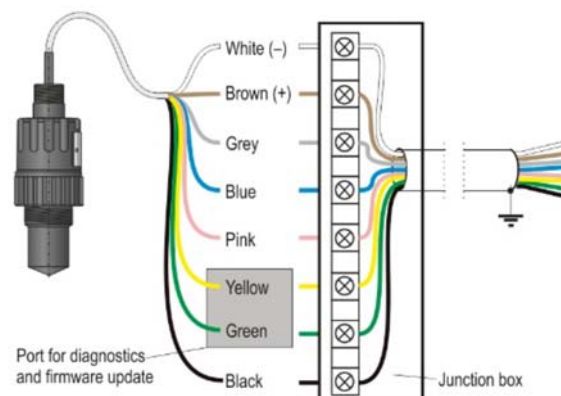

The device must be operated from a galvanically isolated power supply!

Color coding of terminals

pink	– C1 relay output	white	– I	Current loop, supply voltage, and HART terminal 1 (–)
gray	– CC relay output	brown	– I	Current loop, supply voltage, and HART terminal 2 (+)
blue	– C2 relay output	black	– GND	Technical ground and shielding point

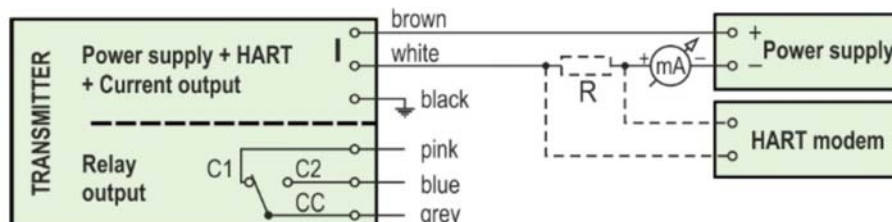

Extending the cable:

It is recommended to use a terminal box to extend the cable. The shielding must be connected to the shielding of the extension cable and grounded at the processing device.

The green and yellow wires are the connection points of the “Service interface” (see next chapter). They are not required for using the device. They are covered with a shrink tube at the cable end by default.

8.4 User interfaces

The device can be set (programmed) using the following tools

HARTCOM-x	Kobold HART modem, available for purchase, driver at https://www.kobold.com/HART-Modem-HARTCOMM/de
NUS-NTB-NRM-SW	Download it free of charge here: www.kobold.com


8.5 BUS (HART®) communication

The output of the device can be used as:


- Current loop output and HART®
- Multidrop, HART® protocol

The NUS-NTB-NRM-SW program supports both modes. In accordance with the Rosemount Standard, HART® communication can be used between the NRE-7 as a “slave” and the HART® master as a point-to-point connection.

Communication can be implemented in two modes:

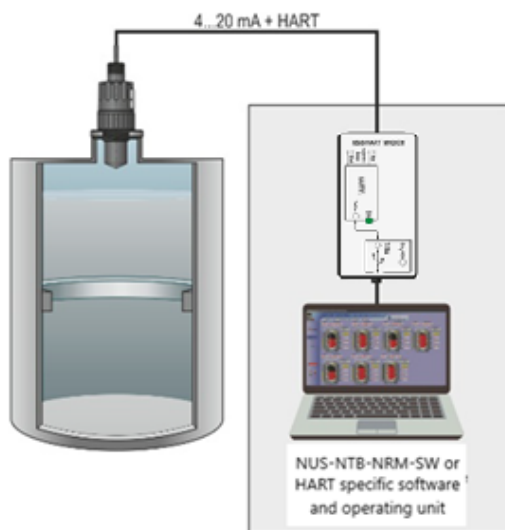

If the device is set to current transmission (4...20 mA, "0" HART® short address) only one device can be used in the HART® communication loop.

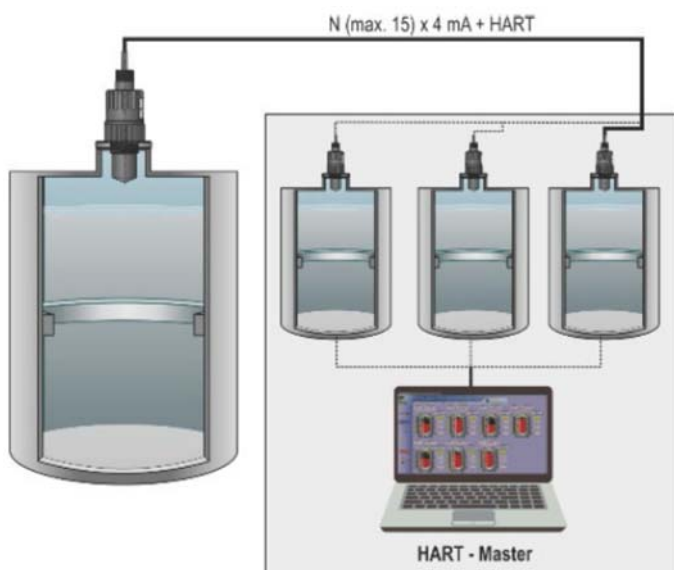

In the case of a multidrop operation (4 mA), several devices (maximum 15) can be connected in a HART® communication loop. The short address of the device must be other than 0.


8.6 Commissioning and setting up

When the device is connected correctly, the radar starts up with a current consumption of 3.5 mA after switching on the power supply. After 3...5 s, the ECHO and the COM LED light up together. After another 5...10 s, the transmitted current corresponding to the operating mode appears on the current output. In this case, the device measures with factory settings. The factory default settings are suitable for checking functionality and using the device for simple measurement tasks, but the device's full potential can only be used with the correct programming tailored to the requirements of the measured process. Therefore, to get to know the operational characteristics thoroughly and solve complex measuring tasks, it is necessary to study the chapters about programming.

LED states:

- **ECHO-LED**
 - ON, if the device receives a suitable echo.
 - BLINKS when the device is searching for an echo.
- **COM-LED**
 - FLASHES UP ONCE if there has been a HART message exchange,
 - ON, if the device is in remote programming mode.
 - BLINKS for 4 seconds after the device is switched on: service communication connection can be established during this time. If it continues to blink, it indicates a firmware error.
- **RELAY LED (optional)**
 - ON, when CC-C2 is energized.
 - OFF, when CC-C1 is energized.

View of the transmitter neck from above:

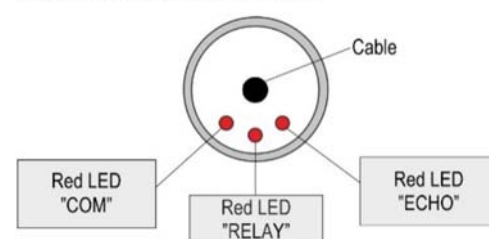

All parameters of the device have a factory default value, which can be restored later if necessary.

The factory settings of the **NRE-7** level measuring device are as follows.

- Measurement mode: level (LEV).
- Zero level is assigned to the maximum measuring distance.
- The current loop output is directly proportional to the level.
- 4 mA and 0% are assigned to zero level.
- 20 mA and 100% are assigned to the maximum level (minimum measuring distance).
- The current loop output holds the last value in case of an error.
- Level-following time constant: 40 s.

Status signals involving two LEDs:

ECHO LED	COM LED	Number of blinks	Status	Source -bit- (See 6.1.)
Blinking alternately		continuous	Low loop voltage	Bit15, Bit14, Bit11 present at the same time
Flashing up at the same time, then pause, and repeat		2	OCT integrity error	Bit3 or Bit4 or Bit5
		3	Not in use	-
		4	Relay error	Bit13
		5	Not in use	-
		6	NV memory error (EEPROM)	Bit1
		continuous	- HRP detection failure - SIM detection failure	Bit12

9. Programming

The HART interface of the **NRE-7** lets the user to access and program all device parameters. The parameter set can be accessed in two ways:

–Using a HART modem connected to the sensing resistor in the current loop and the NUS-NTB-NRM-SW (see NUS-NTB-NRM-SW instructions) program running on the computer.

These methods differ in many aspects. This programming guide only discusses the method involving NUS-NTB-NRM-SW. For detailed information, refer to the descriptions of the particular access methods or the user manuals.

Some rarely used parameters cannot be set directly from the graphical interface. Instead, they can be changed referring to the parameter number at the following path.

NUS-NTB-NRM-SW parameter: “Device Settings” → “Advanced Mode”
→ “Parameters”

9.1 Configuring the measurement

P00: d c b a Unit system, default units, regional parameter

FACTORY DEFAULT: 0000

If parameter P00 is changed, the device reverts the entire parameter set to the factory default values of the new unit system. Therefore, all parameters must be set again!

a	Mode
0	Normal
1	High-sensitivity (+20 dB amplification)

NUS-NTB-NRM-SW parameter: “Device Settings” → “Application” → “Operating mode”

b	Unit (per “c”)	
	Metric (EU)	Imperial (US)
0	m	ft
1	cm	inch
2	mm	inch

NUS-NTB-NRM-SW parameter: “Device Settings” → “Application” → “Engineering units”

c	Region / Unit system	Regional parameter
0	EU / Metric	EU, United Kingdom, Albania, Andorra, Azerbaijan, Australia, Belarus, Bosnia and Herzegovina, Canada, Liechtenstein, Moldova, Monaco, Montenegro, New Zealand, North Macedonia, Norway, San Marino, Saudi Arabia, Serbia, Switzerland, Turkey, Ukraine
1	US / Imperial	United States
2	Region 2 / Metric	Brazil, Japan, South Korea, Taiwan, Thailand
3	Region 2 / Metric	
4 ⁽¹¹⁾	Region 3 / Metric	India, Malaysia, South Africa
5 ⁽¹¹⁾	Region 4 / Metric	Russia, Kazakhstan

⁽¹¹⁾ The accuracy of ± 2 mm is not guaranteed for Region 3 and Region 4 settings.

NUS-NTB-NRM-SW parameter: “Device Settings” → “Application” → “Calculation system”

d	Temperature unit
0	°C
1	°F

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement configuration” → “Temperature”

P01: d c b a Output source

FACTORY DEFAULT: 1011

P01ba defines the source of the primary output value (HART – PV), which also defines the value transmitted on the analog current output. The device automatically selects the measurement mode according to the selected output source. The device measures the level's distance. The other quantities are calculated based on the specified tank parameters and material characteristics.

SV 'dc'	PV 'ba'	Output data / measuring mode	Parameters
10		Distance	–
11		Level	P04
12		Volume	P04, P40...45
13		Weight	P04, P32, P40...45
14 ⁽¹²⁾		Flow	P04, P40...45, P46
15		Empty Volume	P04, P40...45, P47
16		Level%	P04
17		Volume%	P04, P40...45
40		TEMP	–
41		TOT1	–
42		TOT2	–

⁽¹²⁾ Cannot be selected in Volume (12, 17), Weight (13), and Empty Volume (15) measuring modes.


NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement configuration” → “Measurement mode”

Distance measurement (DIST) / Level measurement (LEV)

DIST: Currently measured distance

A: Shortest measurable distance (P05)

H: Longest measurable distance (also the distance to the zero level) (P04)

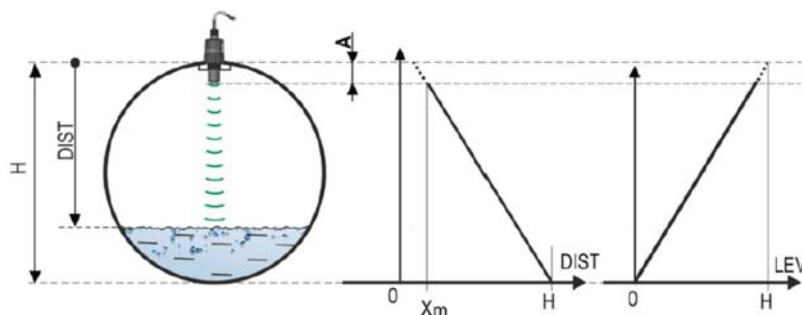


Volume measurement (VOL)

DIST: Currently measured distance

A: Shortest measurable distance **H:** Zero-level distance

B: The volume associated with the highest measurable level

C: Total volume of the container

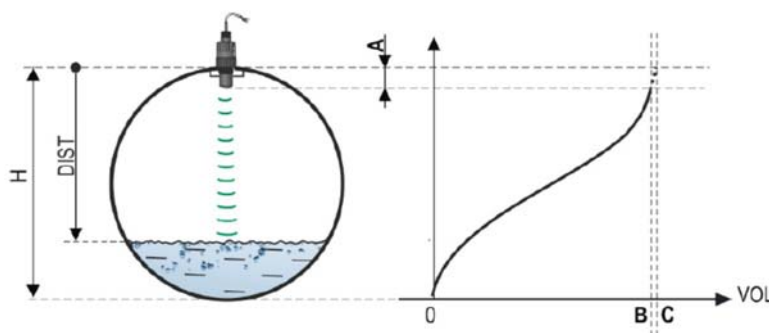

P02: d c b a Output units

FACTORY DEFAULT: 2021

The device calculates the volume, weight, and volume flow over a unit of time using a level-dependent (non-linear) function using **P40** or an output correction table (OCT). This parameter also determines the unit of measure for the "Output" column of the OCT table. The TOT value in flow measurement mode totalized (total) amount flowed. The distance, level, and temperature units can be selected in parameter **P00**.

a	Weight unit	
	Metric	US
0	kg	lb
1	ton	US ton
2	US ton	metric ton

NUS-NTB-NRM-SW parameter: "Device Settings" → "Measurement configuration" → "Mass units"

b	Volume	
	Metric	US
0	liter	gallon
1	hL ⁽¹³⁾	ft ³
2	m ³	barrel
3	million liter ⁽¹⁾	million gallon ⁽¹³⁾

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement configuration” → “Volume units”

c	Time
0	second
1	min
2	hour
3	day

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement configuration” → “Time units”

d	TOT	
	Metric	US
0	liter	gallon
1	hL	ft ³
2	m ³	barrel
3	million liter ⁽¹³⁾	million gallon ⁽¹³⁾

⁽¹³⁾ Its use is not recommended for flow measurement! (In HART transmission, it can only be interpreted together with reading an application-specific code.) Except for MGD.

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement configuration” → “TOT units”

P03: Maximum detection distance

FACTORY DEFAULT: See $X_{\max} + 30$ cm (1 ft).

The maximum sensing distance measured from the process connection. The device evaluates level signals only within the specified distance. The maximum sensing distance is type-specific. See the $X_{\max}$ column (+30 cm [+1 ft]) of the type-specific measurement distance table below. Smaller values can be set. The minimum value is parameter P05 + 30 cm (1 ft). It is not necessary to set this parameter. The device automatically selects the detection distance based on the zero-level distance specified in P04, within the limits of P03.

Type-specific measuring distance	Minimum $X_{\min}$	Maximum $X_{\max}$
NRE-710xR25/ NRE-710xN25	0.056 m (2.2")	10 m (32.8 ft)
NRE-710xR40/ NRE-710xN40	0.070 m (2.76")	10 m (32.8 ft)
NRE-720xR40/ NRE-720xN40	0.070 m (2.76")	20 m (65.6 ft)

*Measured from the process connection

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement configuration” → “Sensing distance”

P04: Zero-level distance (tank height – H) FACTORY DEFAULT: See X_{max} in the table.

This parameter must be set in all cases, except for distance measurement.

The zero-level distance (**P04**) is the distance between the sealing plane of the process connection and the designated zero level of the level measurement (e.g., the bottom of the tank). The device calculates the level value from the P04 value by subtracting the measured level distance. The device automatically sets the measuring distance within the maximum detection distance (P03). The distance given here is denoted by 'H' in the figures and formulas. The maximum distance that can be measured (X_{max}) is in the measuring distance table above, depending on the selected type. The set zero-level distance can be greater than the maximum measuring distance but not more than 60 m (200 ft).

Given that the **level measured** by the device is the calculated difference between the **P04 set** for the given application and the **distance (DIST) measured by the device**, it is important to specify the zero-level distance (H) accurately.

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement configuration”
→ “Zero-level dist.”

P05: Close-end blocking (dead-zone) FACTORY DEFAULT: See X_{min} in the table

The dead-zone (starting from the process connection of the transmitter) is the range within which the device cannot measure due to its physical limitations (antenna insertion length). This is the minimum measuring distance of the device, and it is type-dependent. See the X_{min} column of the type-dependent measuring distance table above.

Close-end blocking is the user-defined extension of the dead zone, within which the device does not consider any echoes. This, e.g., enables the exclusion of objects interfering with the measurement close to the sensor. Close-end blocking cannot be less than X_{min} .

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement configuration”
→ “Minimum(P05)”


P06: Far-end blocking FACTORY DEFAULT: 0.0

In parameter P06, we can specify a level value below which the output will no longer follow any further level decrease. Far-end blocking is used when objects at the bottom of the tank (mixer, heating coil, hopper, etc.) cause measurement uncertainty in this range, e.g., because interfering echoes cannot be safely distinguished from the echoes of the measured surface. If an echo falls within the far-end blocking range ($LEV < P06$), the device sends a special signal and keeps the level value defined here on the output (see figure). The “Echo in far-end blocking range” flag (see Chapter 10.1) indicates that the echo is in the far-end blocking zone. Regardless of this, the “VALID” flag is active, but the “HOLD” flag remains inactive.

Far-end blocking can be deactivated with $P06 = 0$. Min. value: 0 / max. value: $P04 - P05 - 5 \text{ cm (2")}$

A.) Level or volume measurement


- If the level drops below the value of **P06**:
It keeps a level value corresponding to P06 on the output and calculates the derived values from it.
- If the level goes above the far-end blocking limit: In level or volume measurement mode, the programmed tank dimensions are valid, so far-end blocking does not affect the measured or calculated values.

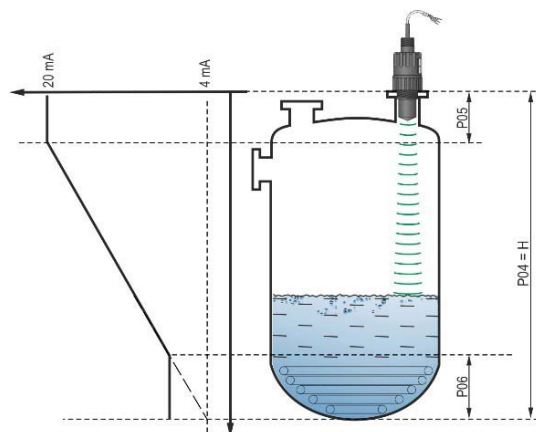

B.) Open-channel flow measurement

Far-end blocking is usually applied to those low-level values, below which exact volume flow cannot be calculated

- If the level in the flume drops below the blocking value:
 - The current loop output holds the value corresponding to $Q = 0$.
 - For 0-value transmission via HART "No Flow" or for displaying 0.
- If the level in the flume rises above the blocking value.
Flow value is calculated using the parameters specified in the program, so remote blocking does not affect the measured value

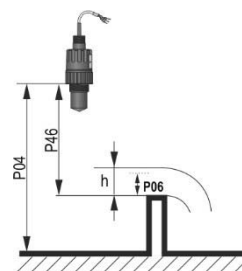

NUS-NTB-NRM-SW parameter: "Device Settings" → "Measurement optimization"
→ "Far end (P06)"

9.2 Current loop output

P08: Manual output current value FACTORY DEFAULT: 4.0

If the analog current loop output mode (**P12b**) is set to "Manual," the output current takes the value specified here, and the analog transmission does not work. A value between 3.8...20.5 mA is specified in this parameter. **Caution!** The device automatically switches to "Manual" current output mode when a new value is set in parameter P08. When 0 is entered, the device switches to "Automatic" current transmission mode ($P12b = 0$) and resets the value of parameter P08 to the factory setting.

In HART multi-drop mode (see parameter P19), the current loop output is fixed at 4 mA, as per standard, and the manual output current value (P08) does not apply.

NUS-NTB-NRM-SW parameter: "Device Settings" "Outputs" → "Current output"
→ "Fix output current (P8)"


P10: The value of the transmitted quantity assigned to 4 mA output current **FACTORY DEFAULT: 0.0**

In the case of “Automatic” mode of the analog current output, it is the PV value assigned to 4 mA (usually the lower limit of the measuring range in the case of level measurement). The device scales the (HART – PV, see P01) output value to the analog current output 4...20 mA range using the values specified in parameters P10 and P11.

NUS-NTB-NRM-SW parameter: “Device Settings” → “Outputs” → “Current output” → “Assignment of 4 mA – PV”

P11: The value of the transmitted quantity assigned to 20 mA output current **FACTORY DEFAULT: X_{MAX}**
(see P03 table)

In the case of “Automatic” (current transmission) mode of the analog current output, it is the PV assigned to 20 mA (usually the upper limit of the measurement range in the case of level measurement). The device scales the (HART – PV, see P01) output value to the analog current output 4...20 mA range using the values specified in parameters P10 and P11. The values can be assigned in an inverted fashion. (For example, 4 mA to 1 m [3.3 ft] level and 20 mA to 10 m [33 ft] level, or vice versa 20 mA to 1 m [3.3 ft] level and 4 mA to 10 m [33 ft] level. Specify in the order.)

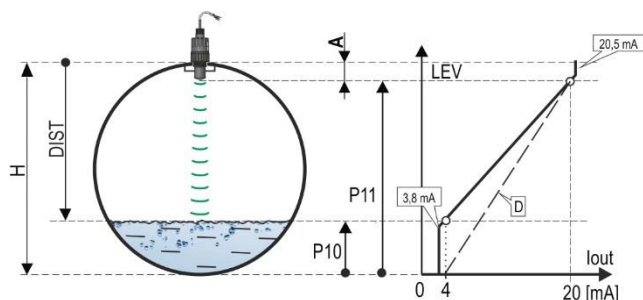

A: Shortest measurable distance
D: **P10, P11** diagram valid
for factory default
settings

NUS-NTB-NRM-SW parameter: “Device Settings” → “Outputs” → “Current output” → “Assignment of 20 mA – PV”.

P12: - c b a Analog current loop output mode **FACTORY DEFAULT: 0000**

Error current mode: The device indicates the error state on the current output according to the setting below. The error indication set as below persists until the error is cleared.

a	Error current mode
0	HOLD (holding last valid value)
1	3.8 mA
2	22 mA

NUS-NTB-NRM-SW parameter: “Device Settings” → “Outputs” → “Current output” → “Error indication by the current output”

Analog current loop mode

b	Analog current loop's mode	Description
0	Automatic (current transmission)	The value of the output current is calculated from the measured value using the parameters P10 and P11. The output of the transmitter is active.
1	Manual	The value of the output current is not calculated from the measured value. Instead, a fixed output current (P08) is sent to the output. In this mode, the setting of the fault current mode is irrelevant. Multi-drop HART communication mode 4 mA (P19) override!

NUS-NTB-NRM-SW parameter: “Device Settings” → “Outputs” → “Current generator mode”

Startup mode: when switching on or restarting after a power failure the current is transmitted until the device starts measuring. It is recommended to set it to the fault current of the system. For periodic applications, e.g., battery operation, selecting the “Fast” recovery mode is recommended to shorten the measurement cycle time.

c	Startup mode	Resume time [s]
0	Normal (3.5 mA)	12...16 ⁽¹⁴⁾
1	Fast (22 mA)	3...4 ⁽¹⁴⁾

⁽¹⁴⁾ Depending on the radar parameters. Note that it also depends on the conditions of use and how long after resuming operation the instrument will find an echo that can be evaluated.

NUS-NTB-NRM-SW parameter: “Device Settings” → “Outputs” → “Startup mode”

9.3 Relay output (optional)



P13: - c b a Relay function

FACTORY DEFAULT: 0001

a	Operating Mode	Description
0	By PV (P14-P15-P16)	The operating mode of the RELAY optionally built into the device can be set with this parameter. If it is set to “by PV,” the RELAY operates based on the triggering (P14) and releasing (P15) values set. The “No ECHO” setting enables a switched (relay contact) error signal to the process controller. Caution! When the device is de-energized, the relay releases, so C1 is ON.
1	“No ECHO” (echo loss): C1 = “On” (release)	
2	“No ECHO” (echo loss): C2 = “On” (energize)	
3	FLOW impulse (P17)	
4	C1 error (release)	
9	OFF	

NUS-NTB-NRM-SW parameter: “Device Settings” → “Outputs” → “Relay output” → “Relay mode”

Operating mode: only relevant for operation by PV (P13a = 0)

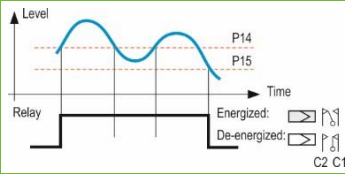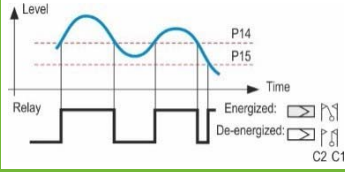b	Function		Programmable parameters	Description
0	Hysteresis		P14, P15 At least 20 mm (0.787") hysteresis required between P14 and P15 . P14 > P15 – normal operation P14 < P15 – inverted operation	The basic switching method of the RELAY set to "PV" mode can be adjusted.
1	Window comparator		P14, P15 At least 20 mm (0.787") difference is required between P14 and P15 . P14 > P15 – normal operation P14 < P15 – inverted operation	

NUS-NTB-NRM-SW parameter: "Device Settings" → "Outputs" → "Relay Function"

FLOW impulse constant's (P17) unit (if P13:a = 3):

c	Metric (EU)	Imperial (US)
0	m ³	ft ³
1	liter	US gallon
2	liter	GB gallon

NUS-NTB-NRM-SW parameter: "Device Settings" → "Outputs" → "Relay output" → "Relay parameters" → "Pulse constant unit"

P14: Relay parameter – Relay on value FACTORY DEFAULT: 0

Value range	Description
Its value can be adjusted according to the PV setting range	It is the PV measurement value at which we want to indicate on the RELAY output that the upper limit has been reached (upper switching value).

NUS-NTB-NRM-SW parameter: "Device Settings" → "Outputs" → "Relay output" → "Relay parameters" → "Energized value"

P15: Relay parameter – Relay off value FACTORY DEFAULT: 0

Value range	Description
Its value can be adjusted according to the PV setting range	It is the PV measurement value at which the RELAY output indicates that the lower limit has been reached (lower switching value).

NUS-NTB-NRM-SW parameter: "Device Settings" → "Outputs" → "Relay output" → "Relay parameters" → "De-Energized value"

P16: Relay parameter – Relay delay

FACTORY DEFAULT: 0

Value range	Description
0...999 s	If the PV measurement value has reached the lower or upper switching value or an error has occurred in the case of an error signal, the actual RELAY operation is activated after this time, or after this time, a change is visible on the output.

NUS-NTB-NRM-SW parameter: “Device Settings” → “Outputs” → “Relay delay time”

P17: Relay parameter – Flow parameter value

FACTORY DEFAULT: 1

In the case of FLOW, the relay gives a pulse per volume unit specified here. The volume unit can be set in parameter P13:c. The pulse width is 100 ms. The guaranteed maximum pulse density: < 3 seconds.

NUS-NTB-NRM-SW parameter: “Device Settings” → “Outputs” → “Relay output” → “Relay parameters” → “Pulse constant”

9.4 Digital communication

P19: HART short address

FACTORY DEFAULT: 0

Unique device address by which the device is identified and managed via HART.

a	Description
0	Analog current loop output is active (4...20 mA current is transmitted)
1...15	Analog current loop output is inactive (no current transmission, fixed 4 mA is present), multi-drop

NUS-NTB-NRM-SW parameter: “Device Settings” → “Device Identification” → “Device Short Address”

9.5 Measurement optimization

P20: Damping time

FACTORY DEFAULT: 40


Damping time reduces unwanted fluctuations in displaying the measured data (e.g., ripples). If the level jumps, the transmitted value reaches 98% of the jump at this time. Unit: second (s). Value range: 0...999 s.

	For testing	Recommended
Barely or not volatile/waving media	0 s	8 s
Strongly volatile/waving media	> 24 s	> 40 s

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement optimization” → “Damping time”

Damping example 1.

Damping time = 10 s Level change = 2 m (6.6 ft)

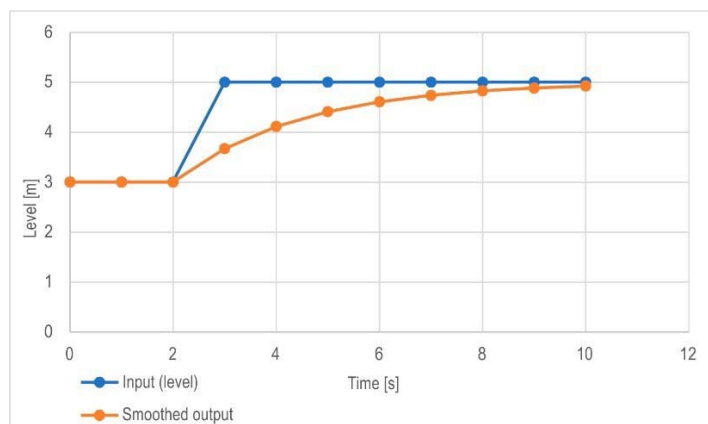


Damping example 2.

Damping time = 40 s Level change = 2...3 cm (0.394"...0.787") waving.

If a higher degree of undulation is expected in the measured liquid column, it is recommended to set a higher damping time value.

This way, the fluctuation of the value of the transmitted level can be reduced.

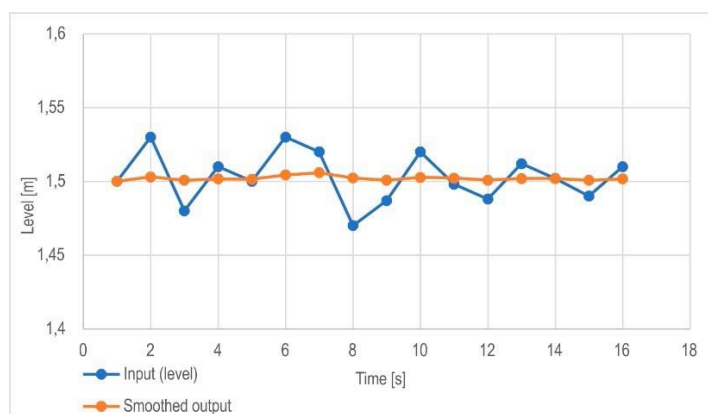

P22: User slope correction factor (actual/measured) FACTORY DEFAULT: 1.0

It corrects the transmitted quantity according to the distance. If the value measured by the device differs from the value under real conditions, this multiplier can be used to refine the result. The output value is multiplied by the number set here. By default, the multiplier (1) does not modify the output.

Value range: 0.7...10

P25: - - - a Echo selection FACTORY DEFAULT: 0

The parameter **P25a** sets the echo selection strategy. Automatic operating mode is suitable for most applications. For special application requirements, a specific echo selection can be set as required.

a	Echo selection within measuring window
0	Automatic
1	First
2	Second
3	Largest
4	Last

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement optimalization” → “Echo selection” → “Selection of Echo...”

P27: Level tracking speed FACTORY DEFAULT: 600 m/h (1 970 ft / h)

The level tracking speed is the fastest level change speed that the device can continuously track. The device will only follow a level change slower than the set value. If the device senses a level signal change faster than this value, it assumes it is the result of a measurement error (e.g., condensation), it will not accept it, and the outputs will show the last valid value. Suppose this resulted from an incorrect measurement, and the result of the next measurement is plausible based on the set maximum speed. Then hold is canceled, and the actual measured level takes effect. If the rapid change in level was actually real, the device recalculates with each measurement whether the currently measured level is within the range determined by the product of the tracking speed and the elapsed time. If it is within the range, it cancels the hold, and the output adjusts to the new value according to the set damping parameter. Setting the level tracking speed is important when technological processes, especially during filling or discharging, produce interfering factors (e.g., ripples, foaming) that affect measurement stability. The set level tracking speed must be higher than the maximum filling/discharging speed prescribed by the technology. By entering it correctly, measurements during filling and discharging become more reliable. **Caution! In tanks with a conical or pyramidal bottom, the level change rate at the bottom of the tank increases significantly due to the shape of the tank.**

In this parameter pair, the filling and discharging speed can be set separately:

P26 – Level elevation rate (filling speed)

P27 – Level descent rate (emptying speed)

The parameter's unit of measure: Metric: [m/h], US: [ft/h]

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement optimalization” → “Level” → “Level elevation rate (filling speed)” → “Level descent rate (emptying speed)”

P28: - - b a Measurement loss management FACTORY DEFAULT: 0010 Echo loss management


a	Echo loss (“no-Echo”) handling
0	Holding until the period in the P28b decade.
1	Hold (no time limit)
2	Filling simulation (at detected speed)
3	Filling simulation (at P26/P27 maximum speed)
4	Tank empty (DIST = maximum / LEV = 0)
5	Tank full (DIST=minimum / LEV = Maximum)

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement optimalization” → “Measurement loss management” → “Echo loss handling”

Error indication delay

This parameter defines the time elapsed between the occurrence of the error and the issued error signal (error current). During the delay, the output is holding the last valid measured value. The function is available for current output only if the error signal is set to a lower (3.8 mA) or upper (22 mA) error current.

When the error is gone, the device returns to measuring mode after the set delay.

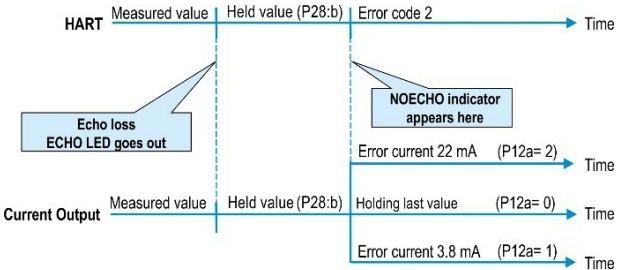b	Error indication delay	Note
0	No delay	
1	10 s	
2	20 s	
3	30 s	
4	1 min	
5	2 min	
6	5 min	
7	15 min	

*DSE – “Device Specific Error” indicator bits (HART), see Chapter 10. Troubleshooting.

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement optimization” → “Measurement loss management” → “Error delay”.

P29: Tank Full Limit **FACTORY DEFAULT: 0.0**

As with P06, the echo is tracked below the specified distance, but the output is not tracked and a "Tank Full" flag is displayed. Value range: 0... (P04 – 5 cm [2"])
If P29 is less than P05, the Tank Full Limit parameter is disabled.

P32: Specific density of the measured medium **FACTORY DEFAULT: 1.0**

If the device is set to weight transmission, the specific density of the material (medium) stored in the tank must be entered here for the weight calculation. The value is a relative ratio number (without a unit) compared to the density of water, i.e., 1 g/cm³.
Value range: 0.01...10

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement optimization” → “Specific gravity”

P34: Threshold offset **FACTORY DEFAULT: 0**

It is used for simple relative modification of the acceptance threshold value set on the Echo diagram, whose value range is –4000...+4000. It can be used to increase (positive value) or decrease (negative value) the device's noise suppression ability compared to the default setting. If the value is set to 0, there is no change compared to the set threshold value. (See chapter 11.4. Threshold mask).

NUS-NTB-NRM-SW parameter: “Device Settings” → “Measurement optimization” → “Threshold offset”

9.6 Volume measurement

P36: 0 - b a Output value calculation method

FACTORY DEFAULT: 0000

A selection of typical tank shapes for volume measurement. The tank dimensions can be set using parameters P41...P45 (see figures below). In the case of the OCT setting, the tank shape must be specified in a table.

ba	Tank shape	Parameters
—	Output Conversion Table (OCT)	See Chapter 9.8
00	Vertical cylindrical tank with flat bottom	P41
10	Vertical cylindrical container with a slightly convex bottom	P41
20	Vertical cylindrical container with a strongly convex bottom	P41
30	Vertical cylindrical tank with hemispherical bottom	P41
01	Vertical cylindrical tank with a conical bottom	P41, P43, P44
02	Vertical rectangular tank with a pyramidal bottom (see below for value b)	P41, P42, P43, P44, P45
03	Horizontal cylindrical tank with flat bottom	P41, P42
13	Horizontal cylindrical container with a slightly convex bottom	P41, P42
23	Horizontal cylindrical container with a strongly convex bottom	P41, P42
33	Horizontal cylindrical tank with hemispherical bottom	P41, P42
04	Spherical tank	P41






NUS-NTB-NRM-SW parameter: “Device Settings” → “Tank/Silo parameters”
→ “Tank/Silo shape”

b	Tank bottom shape	Associating typical tank bottom shapes for the specific tank type to calculate the volume accurately. The exact form of the setting code can be seen in the drawings under parameters P41...45.
0	Planar	
1	Slightly convex	
2	Strongly convex	
3	Hemispherical	

NUS-NTB-NRM-SW parameter: “Device Settings” → “Tank/Silo parameters”
→ “Bottom shape”

P41-45: - - - Tank dimensions

These are the size parameters for the tank shape selected in parameter P40 according to the dimensions shown in the drawings below. **For proper operation, it is important to specify these dimensions accurately.**

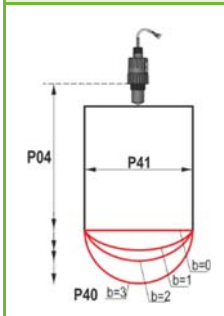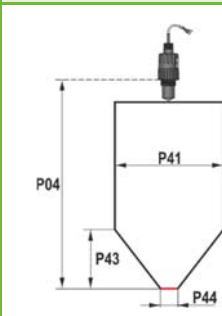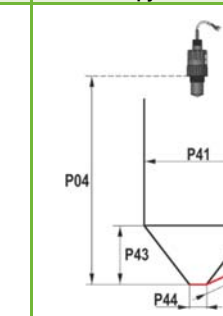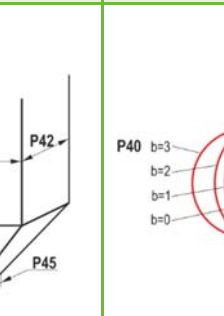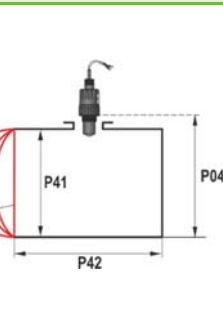Vertical cylindrical tank with a convex bottom	Vertical cylindrical tank with a conical bottom	Vertical rectangular tank with a pyramidal bottom	Horizontal cylindrical tank	Spherical tank
				

P47: - - - a Total tank volume

FACTORY DEFAULT: 0.0

The total tank volume is required for empty volume calculation (see parameter P01). If one of the outputs (PV, SV, TV, or QV) is set to transmit "Ullage volume," then the total volume can be entered in this parameter to calculate the actual transmitted value. In this case, the transmitted data is the difference between the total volume and the actual medium volume. Its unit is the volume unit set in the P01b decade. Value range: 0...999,999.

9.7 Open channel flow measurement

P40: d c b a Volume flow measurement options

FACTORY DEFAULT: 0000

ba	Flume, formula, data					Parameters	
--	KOBOLD Parshall flumes	Output Conversion Table, See Chapter 9.8					
		Type	Calculation formula	Q _{min} [l/s]	Q _{max} [l/s]	“P” [cm]	
00		GPA-1P1	Q [l/s] = 60.87*h ^{1.552}	0.26	5.38	30	P46
01		GPA-1P2	Q [l/s] = 119.7*h ^{1.553}	0.52	13.3	34	P46
02		GPA-1P3	Q [l/s] = 178.4*h ^{1.555}	0.78	49	39	P46
03		GPA-1P4	Q [l/s] = 353.9*h ^{1.558}	1.52	164	53	P46
04		GPA-1P5	Q [l/s] = 521.4*h ^{1.558}	2.25	360	75	P46
05		GPA-1P6	Q [l/s] = 674.6*h ^{1.556}	2.91	570	120	P46
06		GPA-1P7	Q [l/s] = 1014.9*h ^{1.56}	4.4	890	130	P46
07		GPA-1P8	Q [l/s] = 1368*h ^{1.5638}	5.8	1208	135	P46
08	GPA-1P9	Q [l/s] = 2080.5*h ^{1.5689}	8.7	1850	150	P46	
09	Generic Parshall flume					P46, P42	
10	Palmer-Bowlus (D/2)					P46, P41	
11	Palmer-Bowlus (D/3)					P46, P41	
12	Palmer-Bowlus (rectangular)					P46, P41, P42	
13	Khafagi-Venturi					P46, P42	
14	Weir					P46, P42	
15	Rectangular or Bazin weir					P46, P41, P42	
16	Trapezoidal weir					P46, P41, P42	
17	Special trapezoidal (4:1) weir					P46, P42	
18	V-shaped weir					P46, P42	
19	Thomson (90°) weir					P46	
20	Circular weir					P46, P41	
21	Generic formula: Q[l/s] = P41 *h ^{P42} , h [m]					P46, P41, P42	
22	Generic formula: Q[l/s] = P41 *h ^{P42} , h [P00:cb]					P46, P41, P42	






P40: d c b a Volume flow measurement options (continued)




ba	Flume, formula, data	Parameters
30	4" Palmer-Bowlus (D/2)	P46
31	6" Palmer-Bowlus (D/2)	P46
32	8" Palmer-Bowlus (D/2)	P46
33	10" Palmer-Bowlus (D/2)	P46
34	12" Palmer-Bowlus (D/2)	P46
35	15" Palmer-Bowlus (D/2)	P46
36	18" Palmer-Bowlus (D/2)	P46
37	21" Palmer-Bowlus (D/2)	P46
38	24" Palmer-Bowlus (D/2)	P46

NUS-NTB-NRM-SW parameter: "Device Settings" → "Flow measurement"
→ "Open channel flow measurement methods"

P41-45: Flume / weir dimensions


FACTORY DEFAULT: 0

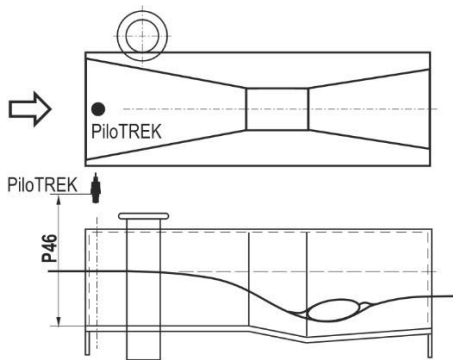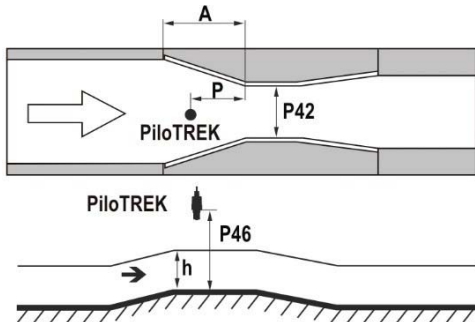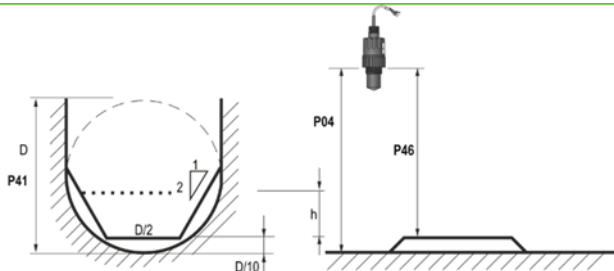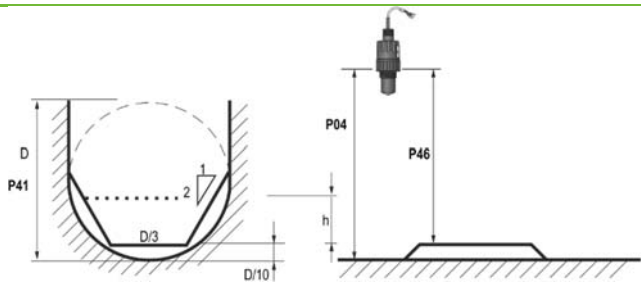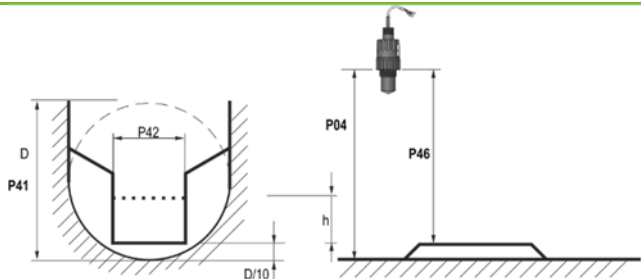P40=00 08	KOBOLD Parshall flume (from GPA1-P1 to GPA-1P9) See details in the manual of the Parshall flume.																						
P40=09	Generic Parshall flume $0.305 < P42$ (throat width) < 2.44 $Q [l / s] = 372 \cdot P42 \cdot (h / 0.305)^{1.569 \cdot P42^{0.026}}$ $2.5 < P42$ <table><tr><td></td><td>P42 [m]</td><td>K</td></tr><tr><td>Q [l/s] = K · P42 · h^{1.6}</td><td>3.05</td><td>2.450</td></tr><tr><td></td><td>4.57</td><td>2.400</td></tr><tr><td>P = 2/3 · A</td><td>6.10</td><td>2.370</td></tr><tr><td></td><td>7.62</td><td>2.350</td></tr><tr><td></td><td>9.14</td><td>2.340</td></tr><tr><td></td><td>15.24</td><td>2.320</td></tr></table>		P42 [m]	K	Q [l/s] = K · P42 · h^{1.6}	3.05	2.450		4.57	2.400	P = 2/3 · A	6.10	2.370		7.62	2.350		9.14	2.340		15.24	2.320	
	P42 [m]	K																					
Q [l/s] = K · P42 · h^{1.6}	3.05	2.450																					
	4.57	2.400																					
P = 2/3 · A	6.10	2.370																					
	7.62	2.350																					
	9.14	2.340																					
	15.24	2.320																					
P40=10	Palmer-Bowlus (D/2) flume $Q [m^3/s] = f(h1/P41) \cdot P41^{2.5}$, where $h1[m] = h + (P41/10)$ P41 [m]																						
P40=11	Palmer-Bowlus (D/3) flume $Q [m^3/s] = f(h1/P41) \cdot P41^{2.5}$, where $h1[m] = h + (P41/10)$ P41 [m]																						
P40=12	Palmer-Bowlus (rectangular) flume $Q [m^3/s] = C \cdot P42 \cdot h^{1.5}$, where $C = f(P41/P42)$ P41 [m], P42 [m]																						

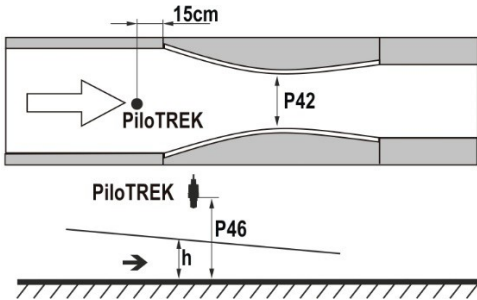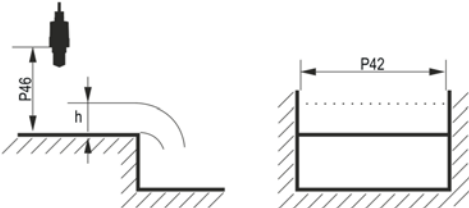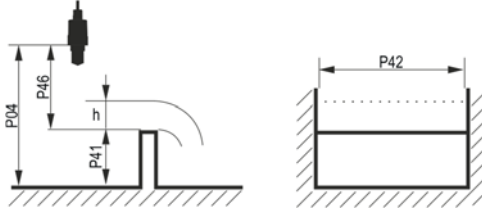P40=13	Khafagi Venturi flume $Q [m^3/s] = 1.744 \cdot P42 \cdot h^{1.5} + 0.091 \cdot h^{2.5}$ P42 [m] h [m]	
P40=14	Step-bottomed weir $0.0005 < Q [m^3/s] < 1$ 0.3 < P42 [m] < 15 $0.1 < h [m] < 10$ $Q [m^3/s] = 5.073 \cdot P42 \cdot h^{1.5}$ Accuracy: ±10%	
P40=15	Square section or BAZIN weir $0.001 < Q [m^3/s] < 5$ 0.15 < P41 [m] < 0.8 0.15 < P42 [m] < 3 $0.015 < h [m] < 0.8$ $Q [m^3/s] = 1.77738(1+0.1378h/P41) \cdot P42 \cdot (h+0.0012)^{1.5}$ Accuracy: ±1%	

P40=16	Trapezoid weir $0.0032 < Q \text{ [m}^3/\text{s]} < 82$ $20 < P41[^\circ] < 100$ $0.5 < P42 \text{ [m]} < 15$ $0.1 < h \text{ [m]} < 2$ $Q \text{ [m}^3/\text{s]} = 1.772 \cdot P42 \cdot h^{1.5} + 1.320 \cdot \text{tg}(P41/2) \cdot h^{2.47}$ Accuracy: $\pm 5\%$	
P40=17	Special trapezoid (4:1) weir $0.0018 < Q \text{ [m}^3/\text{s]} < 50$ $0.3 < P42 \text{ [m]} < 10$ $0.1 < h \text{ [m]} < 2$ $Q \text{ [m}^3/\text{s]} = 1.866 \cdot P42 \cdot h^{1.5}$ Accuracy: $\pm 3\%$	
P40=18	V-notch weir $0.0002 < Q \text{ [m}^3/\text{s]} < 1$ $20 < P42[^\circ] < 100$ $0.05 < h \text{ [m]} < 1$ $Q \text{ [m}^3/\text{s]} = 1.320 \cdot \text{tg}(P42/2) \cdot h^{2.47}$ Accuracy: $\pm 3\%$	
P40=19	THOMSON (90° notch) weir $0.0002 < Q \text{ [m}^3/\text{s]} < 1$ $0.05 < h \text{ [m]} < 1$ $Q \text{ [m}^3/\text{s]} = 1.320 \cdot h^{2.47}$ Accuracy: $\pm 3\%$	
P40=20	Circular weir $0.0003 < Q \text{ [m}^3/\text{s]} < 25$ $0.02 < h \text{ [m]} < 2$ $Q \text{ [m}^3/\text{s]} = m \cdot b \cdot D^{2.5}$, where $b = f(h/D)$ $m = 0.555 + 0.041 \cdot h/P41 + (P41/(0.11 \cdot h))$ Accuracy: $\pm 5\%$	
P40=21	Generic formula: $Q \text{ [l/s]} = P41 \cdot h \cdot P42$ $h \text{ [m]}$	
P40=22	Generic formula: $Q \text{ [l/s]} = P41 \cdot h \cdot P42$ 'h' will be substituted in the unit set in P00c and P00b.	

P40=30...38 Palmer-Bowlus standard D/2 flume (4" ... 24")
Refer to flume's user manual for details.
P46 [P00c, P00b]

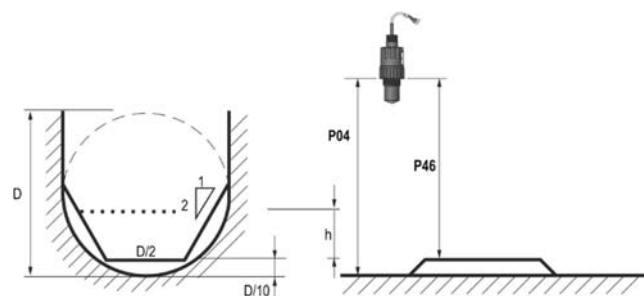

P46: --- a Distance associated with $h=0$ when measuring flow

FACTORY DEFAULT: VARIES BY TYPE

P46 is the distance between the sensor's process connection and the liquid's surface, which can be measured at the limit of the start of the flow ($Q = 0$); see figures. Minimum value: $P05 + 5 \text{ cm}$ (2"). Maximum value: P03.

9.8 Output Conversion Table (OCT) programming

P40: d - ☐ ☐ OCT Operation

FACTORY DEFAULT: 0

d	Output data Measurement mode	Reference
0	Output Conversion Table OFF	See Chapter 9.8
1	Output Conversion Table ON	

An output signal ...of any characteristic can be assigned to the level values measured by the device. The output signal unit is the unit set in parameter P00 or P02 of the output data type assigned to the "HART - PV" output in parameter P01. The characteristic can be specified with a maximum of 100 points. Between the points, the device calculates the output signal from the measured level by linear interpolation and after the last point by linear extrapolation. The OCT can be used to assign the measured level to an arbitrary output signal. Its typical application is the calculation of level to volume for containers that are not included in the tank shape list (e.g., dented) and specifying individual channel characteristics in the case of open channel flow measurement.

Conditions for correct programming of data pairs

- The table must start with $L(1) = 0$ and $R(1)$ is the output quantity assigned to it.
- Column "L" may not contain identical values.
- Columns "L" and "R" can only have increasing values from top to bottom.
- If the table contains less than 100 points, column "L", in the row following the last valuable data pair, must be 0.

i	L (left column) MEASURED LEVEL	R (right column) OUTPUT VARIABLE
1	0	R(1)
2	L(2)	R(2)
	L(i)	R(i)
nn	L(nn)	R(nn)
nn+1	0	
100		

NUS-NTB-NRM-SW parameter: “Device Settings” → “OC-Table” → “OCT list”

9.9 Service diagnostic parameters (read only)

P60:	----	Number of operating hours since issuing [h]
P61:	----	The number of operating hours since the last power-on [h]
P62:	----	The number of operating hours of the relay (closed time of contact C2) [h]
P63:	----	The number of switching cycles of the relay
P64:	----	The current temperature of the device's electronics [°C / °F]
P65:	----	The highest temperature of the device ever measured [°C / °F]
P66:	----	The lowest temperature of the device ever measured [°C / °F]
P70:	----	Number of detected peaks (current)
P71:	----	Magnitude of selected echo (raw value)
P72:	----	The amplitude of the selected echo [dB]
P73:		The distance of the selected echo [m]
P74:		Echo lost/shot ratio

9.10 Flow measurement control parameters (read only)

P76:	----	Measuring height of the flow measurement ('h' value)
Measuring height required for flow measurement. This value is the “h” value in the flow calculation formula.		
P77:	----	TOT1 totalizer (can be cleared)
P78:	----	TOT2 totalizer

9.11 Output control parameters (read only)

P79:	----	Current generator re-measured output current [μA]
P80:	----	Current generator calculated output current [mA]
P81:	----	Relay output status

9.12 Hardware / Software versions (read only)

P94/95:	----	Software code 2 / 3 (SLAVE MCUs)
P96:	----	Software code 3 (MAIN MCU)
P97/98:	----	Hardware identification code

9.13 Service functions

9.13.1 Security codes

Enter and unlock the user code.

The unit can be protected against unauthorized reprogramming by a four-digit pin code. If a value other than zero is entered, the code is active. Entering a zero will clear the user code!

When the code is active, the unit will prompt for the code when entering the menu.

NUS-NTB-NRM-SW parameter: “Device Settings” → “Advanced” → „Special”


9.13.2 Simulation

This function helps the user to check the outputs and the processing device connected to it. NRE-7 can simulate a constant or a variable value of the level. The simulation level values must be within the measurement range defined by P04 and P05. To start the simulation, return to the Measurement mode. During simulation, the DIST, LEV or VOL symbols will flash. To end the simulation, set P84= 0.

P84: --- a Simulation method

FACTORY DEFAULT: 0

a	Simulation method
0	No simulation
1	Triangular symbol
2	Simulate constant level: PV = value given in P86
3	Simulation between levels P86, P87 with cycle time P85 (triangle)
4	Simulation between levels P86, P87 with cycle time P85 (square)

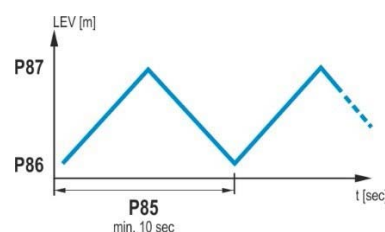

NUS-NTB-NRM-SW parameter: “Device Settings” → “Advanced” → “Special”

P85: DIST simulation cycle time

FACTORY DEFAULT: 0

Simulation cycle time. Unit of measurement: seconds [s].

P86: Lower level of simulation

FACTORY DEFAULT: 0

Unit of measurement: according to P00b.

P87: Top level of simulation

FACTORY DEFAULT: 0

Unit of measurement: according to P00b.

P88: Total simulation time (timeout)

FACTORY DEFAULT: 10

The simulation mode is automatically switched off after the value set here has elapsed. Unit of measurement: minutes [min]. Value range: 0...9999 min. The default value is 10 minutes.

9.13.3 Load default settings

Restores the factory settings of the unit. The values can then be modified. Loading the factory settings does not affect the measurement running in the background (it continues with the parameters set before entering the programming). Before loading the factory settings, the instrument displays a dialog box asking if you are sure you want to do this, because all user settings will be lost!

NUS-NTB-NRM-SW parameter: “Device Settings” → “Parameters” → “Load default”

9.13.4 Restart

Restarting the device "Warm start". (Reloading parameters from the non-erasing memory.)

NUS-NTB-NRM-SW parameter: “Device Settings” → “Advanced” → “Special”

10. Troubleshooting

10.1 Status and error indication in HART communication

The response code, according to the HART® standard, is two 16-bit words after the response code bytes, in the order Errors and Warnings, then Status. If it is impossible to query the status and error code via HART®, then the indication of the LEDs on the device must be monitored. Errors indicated by the status LEDs are described in Chapter 8.6.

Bit №	"Device Specific Error/Warning" flags	Meaning, possible reason, solution
0	No echo (<i>Warning</i>)	The device cannot detect the surface to be measured, so there is no echo or there are too many echoes due to interference. Ensure proper installation! If the problem persists, contact the dealership.
1	EEPROM is not detected (<i>Error</i>)	The parameter memory of the device is compromised. Contact dealership.
2	EEPROM checksum error detected (<i>Error</i>)	Some data stored in the device's parameter memory has been corrupted. Factory default settings are restored by the device. If the device's parameter memory fails frequently, contact the dealership.
3	OCT input side integrity error (<i>Error</i>)	The data in the left (L) column of the Output Conversion Table (OCT) is not incremental. Correct it.
4	OCT output side integrity error (<i>Error</i>)	The data in the right (R) column of the Output Conversion Table (OCT) is not incremental. Correct it.
5	OCT item count is < 2 (<i>Error</i>)	Too few points are entered into the Output Conversion Table (OCT). At least two ($i \geq 2$) points (elements) must be entered.
6	Input level over the OCT input side (overload) (<i>Warning</i>)	The measured level, as the input value of the OCT, points out of the range entered in the left (L) column of the OCT. Enhance the range.
7	EEPROM reinitiated (EEPROM layout damaged or missing) (<i>Error</i>)	The data structure stored in the device's parameter memory is corrupted. The device restored the factory default settings. If the device's parameter memory fails frequently, contact the dealership!
8	—	—
9	Tank Full (<i>Warning</i>)	The measured surface is too close, within the device's minimum measuring range (X_{min}). Set the close-end blocking (P05) to a smaller value, or change the technology to ensure that the surface to be measured does not come so close to the sensor of the device.
10	Echo in far blocking range (<i>Warning</i>)	The measured surface is too far, outside the device's maximum measuring range (X_{max}). Set the far-end blocking (P05) to a larger value, or change the technology to ensure that the surface to be measured does not get so far from the sensor of the device.
11	—	—
12	One or more slave controller(s) failure! (<i>Error</i>)	One of the device's auxiliary controllers has failed. The probability of a firmware error is high. Performing a complete firmware update with NiFlash (including synchronization) may solve the problem. If unsuccessful, contact the dealership.
13	Relay failure (<i>Error</i>)	If the device has an optional relay, it is faulty. Contact the dealership.
14	Parameter table integrity error (<i>Error</i>)	The value of one or more parameters is not consistent with the associated parameters. Correct the parameter value.
15	Sensor failure (<i>Error</i>)	The radar sensor is faulty. There can be several reasons for this, e.g., the data connection with the radar sensor unit is inadequate or insufficient energy available for the measurement. The terminal voltage of the device must be above the prescribed minimum in all circumstances! Check the voltage conditions of the loop by measurement and change it as necessary so that the electrical conditions for the terminals of the device are met. Contact the dealership if the power supply voltage level is correct and the error persists.

Bit №	"Device Specific Status" flags (DSS)	Explanation
0-2	PV value type (DIST, LEV, VOL, MASS, FLOW, LEV%, VOL%, ...)	The type of the primary transmitted value (PV) by P01a.
3	Manual programming is active (Status)	The device is in manual programming mode. (Only on devices (WG□) featuring a display.)
4	Remote programming is active (Status)	The device is in remote programming mode.
5	Simulation is active (Warning)	The device is in simulation mode. Caution! The output value is independent of the measured value.
6	User password is set (Status)	Password protection is on.
7	Relay energized (Status)	Relay is energized.
8	User lock is active (Status)	User lock is active. The parameters are protected by a password set by the user.
9	Factory lock is active (Status)	Factory lock is active. The factory default settings and calibration data are locked.
10	SAP display is connected (Status)	An SAP display is connected to the device. (Only on devices (WG□) featuring a display.)
11	Diagnostic mode is active (Status)	The device is in diagnostic mode.
12	HOLD (Warning)	The transmitted value is on hold.
13	Calibration mode is active (Status)	The device is in calibration mode.
14	Valid (Status)	The transmitted value is refreshed and valid.
15	HS communication mode is active (Status)	The device is in high-speed communication mode.

10.2 Typical application errors

Error	Possible cause	Solution
The transmitted value takes a value from a close range (most often around 0.2 m [7.8"]).	Condensation or dirt on the antenna.	Clean the antenna or use a threshold mask to block the interfering echo.
The measured value does not change despite the level change.	This typically happens when echo loss occurs. In most cases, this is: – during foaming of the medium – dirt on the antenna – excessive waves – incorrect max. (P03) measurement setting – it can happen in cases of echo below the threshold curve.	Remove dirt from the antenna. Check the surface of the medium to be measured, if necessary, take measures to reduce foaming or ripples! Check threshold settings. See Chapter 11.3! Check the P03 maximum measuring distance setting.

11. NUS-NTB-NRM-SW Instructions

If necessary, install the NUS-NTB-NRM-SW HART configuration software (hereafter NUS-NTB-NRM-SW) as described in the program's manual. The software can be downloaded from www.kobold.com.

Electrical connections: Start the program and search for the transmitter with the program (for more information, see also NUS-NTB-NRM-SW user manual).

From the devices found during the detection, select the device you want to configure or program and open the "device programming" window of the device (NUS-NTB-NRM-SW user manual). All the necessary parameters and function settings can be changed with NUS-NTB-NRM-SW. This chapter only describes the specific functions related to NRE-7 and two programming examples.

11.1 Device Status Window


To invoke the "Device Status Window" in NUS-NTB-NRM-SW, right-click on the device line in the "Device List" in the main window and select the "Show Device Status Window" menu item in the popup window. This window shows the status and error messages of the NRE-7 (see Chapter 10.1). The "Device Status Window" can also be summoned in the "Polling" window by activating the corresponding check box.

11.2 Echo Diagram oscilloscope function

Click the “Echo Diagram” button in NUS-NTB-NRM-SW to display the device's Echo Diagram. A window called “Echo map” will appear. This diagram shows the reflection curve measured by the device. In addition, this window can be used to adjust the “Threshold” level.

To update the chart or read the data, press the “Refresh” button on the bottom line of the window (or press the F4 key).

After a successful reading, an echo graph similar to the attached “Echo Diagram” appears. The displayed information content can be selected in the legend. The “Echo list” displays the location and data of the echo peaks evaluated by the device, of which the selected level signal is marked with the inscription “Selected peak.”

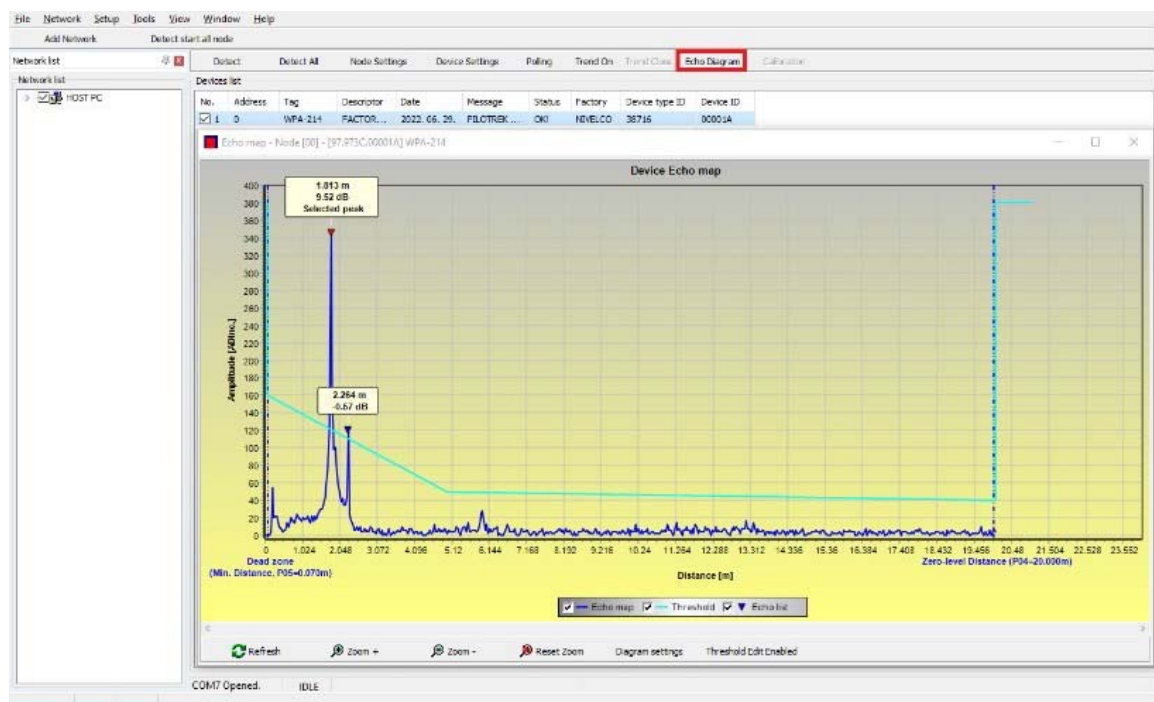

11.3 Threshold settings


The function is intended for advanced users. Incorrect setting may render the device unable to measure!

The purpose of the threshold value and the threshold line is to mask unwanted echoes from the measurement. Echo peaks below the threshold level are not taken into account in the evaluation. Setting the threshold may be necessary if the device selects an inappropriate echo peak as the level, for example because there is an interfering object in the path of the microwave during the measurement. Before changing the threshold curve, it is recommended to minimize interfering echoes by selecting the correct installation location of the device.

The threshold can be edited in the Echo diagram window of the NUS-NTB-NRM-SW program. In addition, the height of the entire threshold can be adjusted in a simplified way with the P34 “Threshold offset” parameter among the measurement optimization parameters. The main threshold line is used to trace the general shape of the echo curve. Threshold highlights, also known as threshold masks, are available to mask interfering echo peaks protruding from the curve.


The threshold editing mode can be activated either by selecting “Threshold Edit Enable” in the bottom menu bar or by selecting “Threshold settings” → “Threshold Edit Enable” in the context menu that appears when clicking the right mouse button. In this case, the threshold editing function bar appears in the upper half of the window, and the editable points are marked red on the threshold curve. If no editable point is selected, the “Threshold offset” can be set in the function bar, so the height of the basic threshold curve consisting of three points is the same. If an editable point is selected by clicking the left mouse button, its position can also be altered separately. Threshold points can also be moved with the mouse by clicking and holding the left mouse button over the selected point.

The changes only take effect in the device after pressing the “Apply Threshold settings” button, which can also be found in the threshold editing function bar or the context menu. To display the evaluation corresponding to the new threshold, refresh the chart with the “Refresh” button in the bottom menu bar (or the F4 function key).

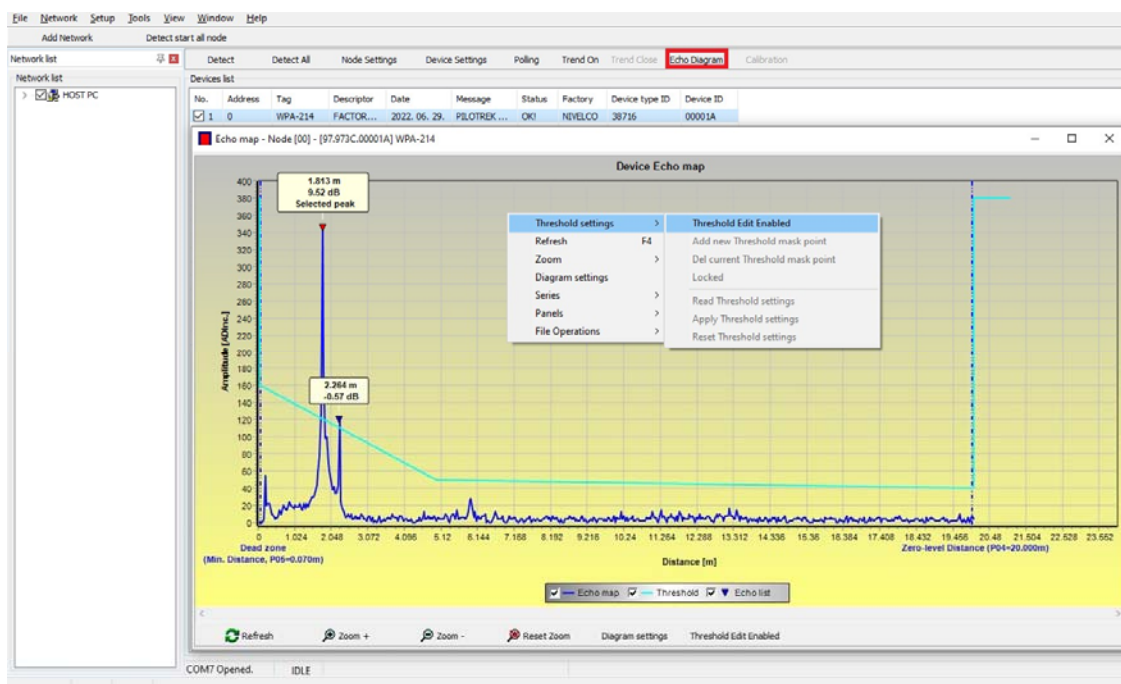

11.4 Threshold mask

The “Threshold Mask” function masks an echo peak that interferes with the measurement. To do this, after pressing the “Add new threshold mask” button in the threshold editing function bar, click the left mouse button in the diagram over the position where you want to place the threshold highlight, or if using the context menu, click with the right mouse button on the desired position, then select the “Add new threshold mask” function. The position and width of the threshold mask can also be adjusted afterwards in the threshold editing function bar by selecting the center point of the highlight as described above. In the case of graphic editing, its position and height can be adjusted by dragging the center point, and its width can be adjusted by dragging the corner point. A total of 4 threshold highlights can be defined. If there are more interfering echoes than 4, it is better to choose another mounting position.

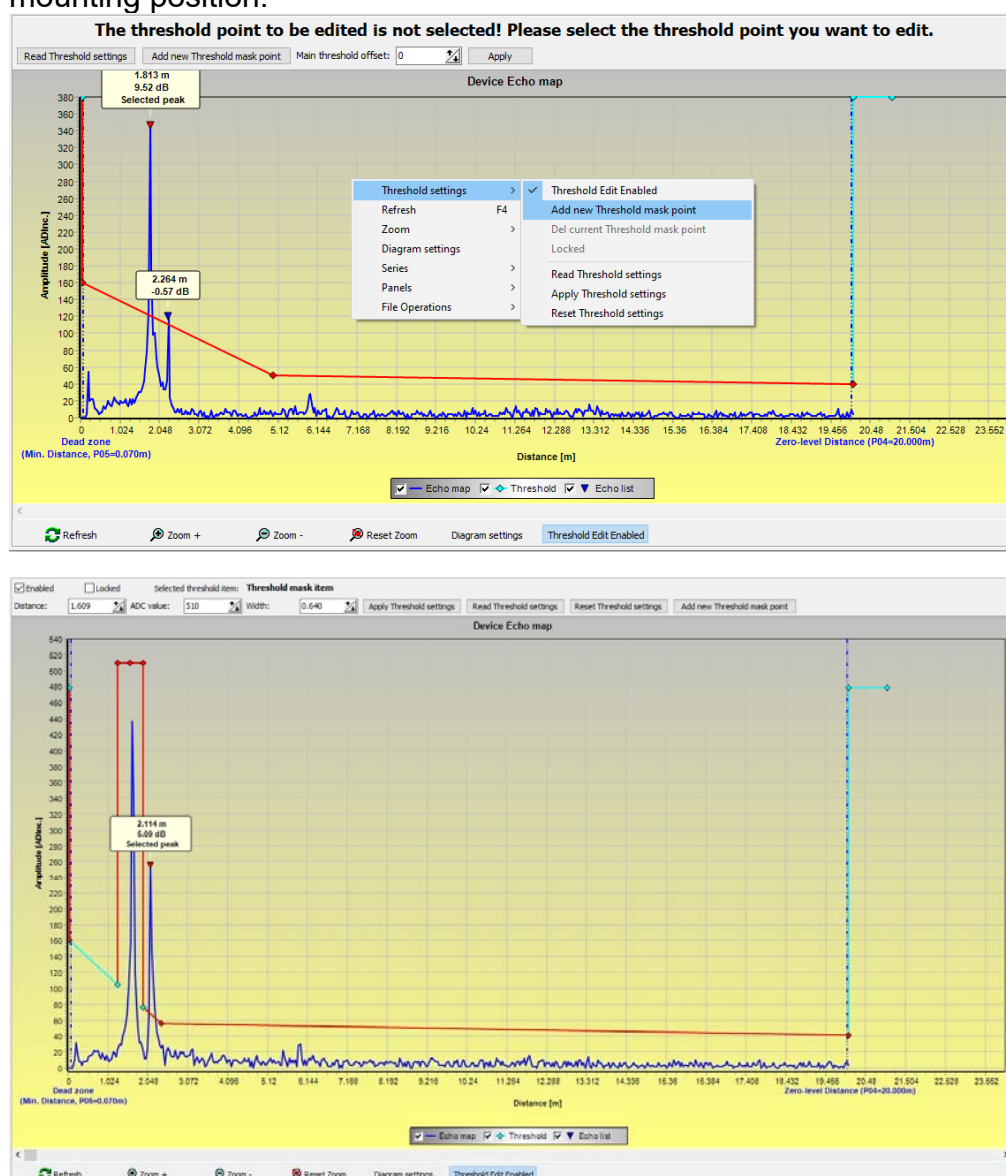

Caution! The “Cursor On” function does not provide an exact value. It only calculates the value of a given point based on the graphical representation.

The threshold highlight can be deleted by selecting its center point, or turning the “Enabled” switch off in the threshold editing function bar, or selecting the “Del current threshold mask” function in the context menu. Until the changes are applied to the device with the “Apply Threshold settings” function, it uses the previous (current) threshold settings, which can be read with the “Read Threshold settings” function. The factory default settings can be restored with the “Reset Threshold Settings” function.

11.5 The output conversion table (OCT) – (NUS-NTB-NRM-SW OC-Table)

The output conversion table (OCT) is active if table correction is selected in parameter P40. See Chapter 9.8. The OCT is filled in using the NUS-NTB-NRM-SW program. The conversion table is usually used for volume measurement but can also be used for weight or flow measurement.

This table assigns different output values to the measured levels. The value on the left is always the measured level (relative to the zero-level distance (P04) setting), and the value on the right is the output value for the particular level. The unit associated with the output value is determined by the setting of the “Output source” (P01, HART - PV) and “Output units” (P02) parameters.

The output value is determined by linear interpolation between two value pairs, so the accuracy of the conversion depends on the density of the associated value pairs. After the last pair of points, the output value is calculated by linear extrapolation. The maximum number of pairs is 100.

More information

- Each new level value entered must be greater than the previous one.
- Attention, the units in the table are always interpreted by the device according to the currently set units of measure. Therefore, the OCT must always be filled in with values corresponding to the set units.
- **Caution!** When using the conversion table, the setting of the current output (P10/P11) is also interpreted according to the value range (and measurement unit) defined on the left side of the table. Accordingly, the appropriate setting of the P10/P11 parameters is recommended after uploading the table.
- If the conversion table is filled in incorrectly, the output (transmitted) value will not be correct either!

A user-defined conversion table (e.g., “level - volume”) can be created using NUS-NTB-NRM-SW as follows:

To fill in or set the output conversion (OC) table of the device, go to the “Device Settings” → “OC-Table” tab in NUS-NTB-NRM-SW. Upload or modify the table according to “NUS-NTB-NRM-SW Instructions for Use”. If the appropriate changes have been made in the table and it has been filled in correctly, press the “Send” button on this page (“OC-Table” tab) on the right side under the “Get” button to download the table to the device.

In the following example, five-point programming is presented, example: “Level - Volume” conversion

Step	Action	Entered data / chosen value
1	In NUS-NTB-NRM-SW, open the "Device Settings" window of the given device.	
2	Go to the point called "Application" and select the unit system ("Calculation system").	Metric (EU)
3	Select a length unit.	m
4	Go to "Measurement configuration" and select "Measurement mode (PV source): volume transmission" from the list.	Volume
5	Select a volume unit in the "Volume Units" section.	m³
6	Go to "Measuring distances" and enter the tank height in the field named "Zero-level dist." (Click on the field and enter the value).	6.00 m (20.00 ft)
9	Press the "Send" button in the lower right corner of the window to download the new values to the device.	Wait until the download process is complete.
10	Go to the point called "OC-Table." Fill in the table called "OCT list" with the appropriate values. A maximum of 100 points can be entered. Each level and volume point must be entered. Each subsequent point must be larger than the previous one. <i>New lines can be created by pressing the "Ctrl + Insert" key combination or selecting "Add new item" in the popup menu of the right mouse button.</i> <i>A line can be deleted by pressing the "Ctrl + D" keys together.</i>	See the following table (Example for completing OCT)
11	To download the table to the device, press the "Send" button located on this page ("OC-Table" tab) on the right side under the "Get" button.	

Example of filling out the OCT

Point	Level (Source column)	Volume (Output column)
1	0.0 m (0.0 ft)	0.0 m³ (0.0 ft³)
2	0.20 m (0.66 ft)	0.5 m³ (17.6 ft³)
3	0.75 m (2.46 ft)	1.0 m³ (35.3 ft³)
4	1.00 m (3.30 ft)	1.5 m³ (53 ft³)
5	5.60 m (18.37 ft)	16.8 m³ (593.3 ft³)

Example of setting 4...20 mA current output (using NUS-NTB-NRM-SW)

Step	Action	Entered data / chosen value
1	Go to "Outputs" and set "Current generator mode" to "Auto" (default setting)	Auto
2	In the "Error indication ..." field, set the error status to the appropriate mode (default setting).	Hold-
3	Select "Assignment of 4 mA - PV (P10)" and enter the volume value corresponding to the output current value of 4 mA.	0.5 m³ (17.6 ft³)
4	Select "Assignment of 20 mA - PV (P11)" and enter the volume value corresponding to the output current value of 20 mA.	16.8 m³ (593.3 ft³)
5	Press the "Send" button in the lower right line of the window to download the new values to the device.	
6	Press the "X" close button to exit the device settings window.	

11.6 Programming example 1 – configuring level measurement (using NUS-NTB-NRM-SW)

Configuring level measurement in a 9 m (29.5 ft) tank (example). Level measurement is the factory default mode, it is sufficient to enter only the actual tank height (P04 = 9.0 m [29.5 ft]). The maximum measuring length of the WP-200 radar configured by the manufacturer is 10.0 m (33 ft), so it covers the required 9 m (29.5 ft).

Step	Action	Entered data / chosen value
1	Open the "Device Settings" window corresponding to the given device in NUS-NTB-NRM-SW.	The program reads and displays the device settings.
2	Select "Measurement configuration."	
3	Click on "Zero-level dist." (Zero-level distance) field.	Data in the field: 10.000 [m] (33.000 [ft])
4	Enter the new value.	9.000 [m] (29.500 [ft])
5	Press the "Send" button in the lower right corner of the window to download the new value to the device.	The device will work according to the new settings after the download is complete.
6	Press the "X" close button to exit the device settings window.	

11.7 Programming example 2 – configuring the current loop output (using NUS-NTB-NRM-SW)

Custom scale setting: Example: 4 mA indicates the 1 m level [3.3 ft], 20 mA indicates the full tank, for example 8 m (26.2 ft) maximum level, upper error current.
Set current range 4...20 mA with 22 mA error indication.
Choose a suitable minimum and maximum value for the scale of the measurement

Step	Action	Entered data / chosen value
1	In NUS-NTB-NRM-SW, open the "Device Settings" window corresponding to the given device.	The program reads the device settings and displays them.
4	Select "Outputs"	
5	Select the "Error indication ..." drop-down list.	The field will read "Hold"
6	Select the new setting value (22 mA) in the drop-down list.	The field will read "22 mA"
7	Select the "Assignment of 4 mA - PV" data field.	The field will read "0.000 [m]" (0.000 [ft])
8	Enter the new value. This sets the level corresponding to a minimum output of 4 mA (1 m).	The field will read "1.000 [m]" (3.300 [ft])
9	Select the "Assignment of 20 mA - PV" data field.	The field will show the maximum measuring distance by default.
10	Switch to 8.000 m (26.20 ft). This sets the level corresponding to a maximum output of 20 mA (8 m [26.2 ft]).	The field will read "8.000 [m]" (26.20 [ft])
11	Press the "Send" button in the lower right line of the window to download the new values to the device.	After the download is complete, the device will use the new settings.
12	Press the "X" close button to exit the device settings window.	

12. Parameter list

Pr.	Page	Name	Value				Pr.	Page	Name	Value			
			d	c	b	a				d	c	b	a
	20	Unit system, default units, regional parameter					P27	32	Level descent rate (emptying speed)				
	21	Output source					P28	33	Measurement loss management				
	21	Output units					P29	33	Tank Full Limit				
	23	Maximum detection distance					P30		—				
	23	Zero-level distance (tank height – H)					P31						
	24	Close-end blocking (dead-zone)					P32	33	Density of measured medium				
	24	Far-end blocking					P34	34	Threshold offset				
	—						P36	34	Bluetooth Settings				
	26	Manual output current value					P40	37	Tank shape				
	—						P41	37	Tank dimensions / Volume flow options				
	26	Output value assigned to 4 mA					P42	37	Tank dimensions / Flume – weir dimensions				
	26	Output value assigned to 20 mA					P43	37	Tank dimensions / Flume – weir dimensions				
	27	Analog current loop output's mode					P44	37	Tank dimensions / Flume – weir dimensions				
	28	Relay output					P45	37	Tank dimensions / Flume – weir dimensions				
	29	Relay parameter – Trigger value					P46	43	The distance to the surface without flow				
	29	Relay parameter – Release value					P47	36	Total tank volume				
	29	Relay parameter – Delay											
	29	Relay parameter – Flow parameter value											
	—												
	30	HART address											
	30	Damping Time											
	—												
	32	User slope correction factor (actual/measured)											
	—												
	—												
	32	Echo selection											
	32	Level elevation rate (filling speed)											

Pr.	Page	Name	Pr.	Page	Name
P60	46	Number of operating hours since issuing [h]	P80	46	Current generator calculated output current [mA]
P61	46	The number of operating hours since the last power-on [h]	P81	46	Status of relay outputs
P62	46	The number of operating hours of the signal detector (closed time of contact C2) [h]	P82		—
P63	46	The number of switching cycles of the relay	P83		—
P64	46	The current temperature of the electronics [°C / °F]	P84	47	Simulation method
P65	46	The highest temperature of the device ever measured [°C / °F]	P85	48	DIST simulation cycle time
P66	46	The lowest temperature of the device ever measured [°C / °F]	P86	48	Lower level of simulation
P67		—	P87	48	Top level of simulation
P68		—	P88	48	Total simulation time (timeout)
P69		—	P89		—
P70	46	Number of detected peaks (current)	P90		—
P71	46	Magnitude of selected echo [raw value]	P91		—
P72	46	Amplitude of selected echo [dB]	P92		—
P73	46	Distance of selected echo [m]	P93		—
P74	46	Echo lost/shot rate	P94	47	Software code (RADAR)
P75			P95	47	Software code (COPROC)
P76	46	Measuring height of the flow measurement (read only) (LEV)	P96	47	Software code (MAIN MCU)
P77	46	TOT1 totalizer (clearable)	P97	47	Special config mode (read only)
P78	46	TOT2 totalizer	P98	47	Hardware code (read only)
P79	46	Current generator re-measured output current [μA]	P99		—

13. Maintenance, repair and storage conditions

The NRE-7 does not require regular maintenance. However, there may be cases where the sensor head needs to be cleaned of material deposits. Clean the device carefully, without scratching or pressing the radiating surface.

All repairs, whether covered by warranty or not, must be carried out by Kobold.

The device returned for repair must be cleaned by the user, all chemical deposits must be removed, and the device must be disinfected before sending it back. In addition, the return package must include a properly filled "State of Safeness", in which the sender declares that the device is free of all contamination and substances hazardous to health.

If the device is not used, store it within the ambient temperature specified in the technical data, with a maximum humidity of 98%.

14. Firmware update

The device's firmware is continuously maintained, considering user feedback and needs. If you want to update the firmware, contact your local Kobold Partner!

15. Technical Information

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

16. Order Codes

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

17. Dimensions

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

18. Disposal

See "General Safety Instructions" - via the QR code on the device or via www.kobold.com

19. EU Declaration of Conformance

We, KOBOLD Messring GmbH, Nordring 22-24, 65719 Hofheim, Germany, declare under our sole responsibility that the product:

Non-Contact Radar Level Transmitter, 80 GHz – Integrated Design
Model: NRE-7

to which this declaration relates is in conformity with the following EU directives stated below:

2014/30/EU	EMC Directive
2014/35/EU	Low Voltage Directive
2014/53/EU	RED
2011/65/EU	RoHS (category 9)
2015/863/EU	Delegated Directive (RoHS III)

Also, the following standards are fulfilled:

EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019 Safety requirements for electrical equipment for measurement, control and laboratory use - Part 1: General requirements

EN 61326-1:2013 Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 1: General requirements

EN 61326-2-3:2013 Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 2-3: Particular requirements - Test configuration, operational conditions and performance criteria for transducers with integrated or remote signal conditioning

EN 302372:2017 Short Range Devices (SRD) - Tank Level Probing Radar (TLPR) operating in the frequency ranges 4,5 GHz to 7 GHz, 8,5 GHz to 10,6 GHz, 24,05 GHz to 27 GHz, 57 GHz to 64 GHz, 75 GHz to 85 GHz - Harmonised Standard covering the essential requirements of article 3.2 of the Directive 2014/53/EU

EN 302 729:2017 Short Range Devices (SRD); Level Probing Radar (LPR) equipment operating in the frequency ranges 6 GHz to 8,5 GHz, 24,05 GHz to 26,5 GHz, 57 GHz to 64 GHz, 75 GHz to 85 GHz; Harmonised Standard covering the essential requirements of article 3.2 of the Directive 2014/53/EU

EN 301489-1:2020 ElectroMagnetic Compatibility (EMC) standard for radio equipment and services - Part 1: Common technical requirements - Harmonised Standard for ElectroMagnetic Compatibility

EN 301489-33:2020 ElectroMagnetic Compatibility (EMC) standard for radio equipment and services - Part 33: Specific conditions for Ultra-WideBand (UWB) devices - Harmonised Standard covering the essential requirements of article 3.1(b) of Directive 2014/53/EU

Hofheim, 16 April 2024

A handwritten signature in blue ink, appearing to be 'H. Volz'.

H. Volz
General Manager

A handwritten signature in blue ink, appearing to be 'J. Burke'.

J. Burke
Compliance Manager

20. EU Declaration of Conformity (ATEX)

We, Kobold Messring GmbH, Nordring 22-24, 65719 Hofheim, Germany, hereby declare under our sole responsibility and with the aim of traceability that the product

Product type: Non-contact Radar Level Transmitter, 80 GHz –
Integrated Design
Type: NRE-7

EU type examination certificate: BKI24ATEX0011 X

Complies with all relevant requirements of the following directive(s):

2014/34/EU Equipment and Protective systems intended for use in potentially Explosive Atmospheres

The following harmonized standards were applied for conformity assessment:

EN IEC 60079-0:2018	Equipment – General requirements
EN 60079-11:2012	Device protection through intrinsic safety “i”

The above-mentioned product complies with Directive 2014/34/EU. New editions may have already replaced one or more of the standards mentioned in the EU type examination certificates. Kobold Messring declares that the product mentioned in this declaration of conformity either meets the requirements of the new editions or is not affected by the changes.

The notified body DEKRA Testing and Certification GmbH, identification number: 0158, was activated, in accordance with Article 17 of Directive 2014/34/EU, to monitor quality assurance related to the production process.

Hofheim, 01 July 2024



H. Volz
General Manager

J. Burke
Compliance Manager

21. Ex ia Certificate

	 EXVA Vizsgáló és Tanúsító Kft.	A NAH által NAH-6-0027/2022/K számon akkreditált terméktanúsító szervezet. / Product certification organisation accredited by NAH under No. NAH-6-0027/2022/K	
(1) <i>EU-Típus Vizsgálati Tanúsítvány</i> <i>EU-Type Examination Certificate</i>			
(2) A potenciálisan robbanásveszélyes környezetben történő alkalmazásra szánt berendezések, védelmi rendszerek 2014/34/EU Direktiva / Equipment or Protective Systems Intended for use in Potentially Explosive Atmospheres Directive 2014/34/EU			
(3) EU-Típus Vizsgálati Tanúsítvány száma / EU-Type Examination Certificate number:		BKI24ATEX0011 X	
(4) A gyártmány / Product: NRE 80 GHz-es sugárzott mikrohullámú szinttávadó / NRE Non-contact radar level transmitter 80 GHz Típusa / Type: – NRE-7 integrált kivitelű típusváltozat, 80 GHz / integrated line – NRE-4, -6 kompakt kivitelű típusváltozat, 80 GHz / compact line Lásd részletes típusjelölést a 15.2 pontban / See detailed type legend in point 15.2			
(5) Gyártó / Manufacturer: Kobold Messring GmbH			
(6) Cím / Address: Nordring 22-24 65719 Hofheim am Taunus Germany			
(7) A gyártmány és annak változatai a jelen tanúsítvány vonatkozó pontjában vannak feltüntetve. / This product and any acceptable variation thereto is specified in the schedule to this certificate and the documents therein referred to.			
(8) A ExVA Vizsgáló és Tanúsító Kft., 1418 sz. kijelölt testület, a 2014. február 26-i Európai Parlament és Tanács 2014/34/EU Direktívájának 17. cikkelye szerint tanúsítja, hogy a gyártmány megfelel az Alapvető Egészség- ügyi és Biztonsági Követelményeknek a Direktiva II. számú Mellékletében a potenciálisan robbanásveszélyes térben alkalmazásra szánt gyártmányok tervezése és gyártása szerint. / ExVA Testing and Certification Limited Liability Company, notified body number 1418 in accordance with Article 17 of Directive 2014/34/EU of the European Parliament and of the Council, dated 26 February 2014, certifies that this product has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of products intended for use in potentially explosive atmospheres given in Annex II to the Directive.			
A vizsgálat eredményeit az alábbi nyilvántartási számú bizalmas vizsgálati dokumentáció tartalmazza: / The examination and test results are recorded in confidential report No.:		VA-0021-24-A	
Ez a tanúsítvány csak a maga egészében és változatlan formában használható fel, mellékleteivel együtt. / This certificate may only be reproduced in its entirety and without any changes, schedule included.		Lapszám / Page: 1/8	
Tanúsítási eljárás 13. melléklete		Rev00. 2023.02.01.	



BKI24ATEX0011 X
EU-Típus Vizsgálati Tanúsítvány/
EU-Type Examination Certificate

- (9) Az alapvető egészségügyi és biztonsági követelményeknek való megfelelést a következők biztosítják: /
Compliance with the Essential Health and Safety Requirements has been assured by compliance with:
MSZ EN IEC 60079-0:2018, MSZ EN 60079-11:2012

kivéve a 18. pontban felsorolt követelményekre vonatkozóan.
except in respect of those requirements listed at item 18 of the Schedule.

- (10) A tanúsítvány száma után álló „X” jel azt mutatja, hogy a gyártmány speciális feltételek megtartása mellett felel meg a jelen tanúsítvány vonatkozó pontjában feltüntetett biztonságos alkalmazás feltételeinek. /
If the sign „X” is placed after the certificate number, it indicates that the product is subject to Specific Conditions of Use specified in the schedule to this certificate.

- (11) Jelen EU-TÍPUS VIZSGÁLATI TANÚSÍTVÁNY csak a megjelölt gyártmány tervezésére és kivitelezésére vonatkozik. A jelen Direktíva további követelményei vonatkoznak a gyártmány gyártási folyamatára és szállítására. Ezek nem tartoznak e tanúsítvány alá. /
This EU-TYPE EXAMINATION CERTIFICATE relates only to the design and construction of the specified product. Further requirements of this Directive apply to the manufacturing process and supply of this product. These are not covered by this certificate.

- (12) A gyártmány jele a következő /
The marking of the product shall include the following:


Lásd tanúsítvány 15.1 pontját / See point 15.1 of certificate

ExVA Vizsgáló és Tanúsító Kft.
ExVA Testing and Certification Ltd.
Hungary, 1037 Budapest, Mikoviny u. 2-4.
Tel.: +36 1 408 2213
E-mail: office@exva.hu

ExVA Vizsgáló és Tanúsító Kft.
1037 Budapest, Mikoviny S. u. 2-4
10925306-2-41


Nagy Botond
Tanúsító Szervezet Vezető /
Head of Certification Body

Budapest, 2024. június / June 10.

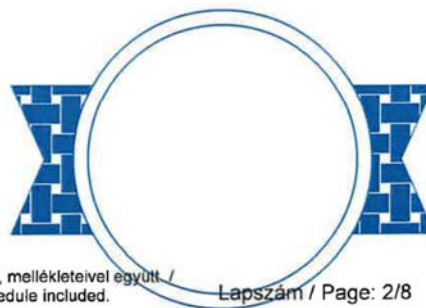

Ez a tanúsítvány csak a maga egészében és változatlan formában használható fel, mellékleteivel együtt. /
This certificate may only be reproduced in its entirety and without any change, schedule included.

Lapszám / Page: 2/8





BKI24ATEX0011 X
EU-Típus Vizsgálati Tanúsítvány/
EU-Type Examination Certificate



(13) Melléklet / Schedule

(14) EU-TÍPUSVIZSGÁLATI TANÚSÍTVÁNY szám /
EU-TYPE EXAMINATION CERTIFICATE N°
BK124ATEX0011 X

(15) Gyártmány leírása / Description of Product

Az NRE szinttávadó 80 GHz-es frekvenciasávban (W-sáv) működő szakaszosan folytonos hullámú frekvenciamodulált radar (FMCW).

A szinttávadó antennájával kisugárzott frekvenciamodulált hullám energiájának egy része a mérendő anyagtól függően a mérendő felszínről visszaverődik. A visszaverő felület távolságát az elektronika a visszavert jel futás idejével proporcionális frekvenciaeltolódásából számolja ki nagy pontossággal, majd távolság-, szint- vagy térfogatarányos jellé alakítja. A milliméterhullámú jel terjedési sebessége levegőben, gázokban, vákuumban hőmérséklettől és közegnyomástól függetlenül közel állandó, ezért ezek a tényezők nem befolyásolják érdemben a mérési pontosságot. A visszaverődő milliméterhullámok jelerőssége nagymértékben függ a mérendő közeg dielektromos állandójától (DK ill. ϵ_r), ezért ettől függően csökkenhet a gyakorlatban elérhető maximális mérestávolság. /

The NRE level transmitter is an intermittent continuous wave frequency modulated (FMCW) radar operating in the 80 GHz frequency band (W-band).

Depending on the material to be measured, part of the energy of the frequency-modulated wave emitted by the antenna of the level transmitter is reflected from the surface to be measured. The electronics calculates the distance of the reflecting surface from the frequency shift proportional to the running time of the reflected signal with high accuracy, and then converts it into a distance-, level-, or volume-proportional signal. The propagation speed of the millimeter wave signal in air, gases, and vacuum is almost constant regardless of temperature and medium pressure, so these factors do not significantly affect the measurement accuracy. The signal strength of the reflected millimeter waves depends to a large extent on the dielectric constant (DK or ϵ_r) of the medium to be measured, therefore the maximum measurement distance that can be achieved in practice may decrease depending on this.

15.1 Védelmi jel, környezeti hőmérséklet / Protection mark, ambient temperature

Normál kivitel / Standard design		
integrált NRE-7 integrated NRE-7	NRE-7	II 1 G Ex ia IIC T5 Ga II 1 D Ex ia IIIC T95°C Da
kompakt NRE-4,-6 compact NRE-4, -6	NRE-4, -6	II 1 G Ex ia IIC T6 Ga II 1 D Ex ia IIIC T85°C Da
Magashőmérsékletű kivitel / High-temperature design		
kompakt NRE-4,-6 compact NRE-4, -6	NRE-4, -6	II 1 G Ex ia IIC T6...T3 Ga II 1 D Ex ia IIIC T85°C...T180°C Da

Normál kivitel / Standard design					
integrált NRE-7 integrated NRE-7	Környezeti hőmérséklet / Ambient temperature	-40 °C ... +80 °C			
kompakt NRE-4,-6 compact NRE-4,-6		Kijelző nélküli kivitel esetén / In case of version without display	Kijelzővel rendelkező kivitel esetén / In case of version with display		
		-40 °C ... +70 °C	-20 °C ... +70 °C		
Magashőmérsékletű kivitel / High-temperature design					
kompakt NRE-4,-6 compact NRE-4,-6	Környezeti hőmérséklet / Ambient temperature	Kijelző nélküli kivitel esetén / In case of version without display		Kijelzővel rendelkező kivitel esetén / In case of version with display	
		T6 ... T5, T85 °C ... T100 °C		T6 ... T5, T85 °C ... T100 °C	
		T4...T3, T135 °C...T180 °C		T4...T3, T135 °C...T180 °C	
		-40 °C ... +70 °C		-20 °C ... +70 °C	
		-40 °C ... +60 °C		-20 °C ... +60 °C	

Ez a tanúsítvány csak a maga egészében és változatlan formában használható fel, mellékleteivel együtt. /
This certificate may only be reproduced in its entirety and without any change, schedule included.

Lapszám / Page: 3/8





BKI24ATEX0011 X
EU-Típus Vizsgálati Tanúsítvány/
EU-Type Examination Certificate

15.2 Típusjelölés / Type marking

NRE-7 integrált kivitelű típusváltozat / integrated design

NRE-7 ☐ ☐ ☐ ☐

Opció / Option	Kód / Code
Kábelhossz / Cable length 1 m lépésekben, max. 30 m / 1 m Steps, max. 30 m	K
Kimenet/Kijelző/Védelem / Output/Display/Approval	Kód / Code
4-20 mA HART / nélkül/without / ATEX Ex ia GD	A0I
4-20 mA HART + Bluetooth / nélkül/without / ATEX Ex ia GD	B0I
Technológiai csatlakozás felső / Process connection bottom/top	A...Z, 0...9, 0...9
Sugárzó és ház anyaga / Material Antenna (Transducer) / Housing	Kód / Code
PP / PP	A
PVDF / PVDF (előkészületben / in preparation)	B
PTFE / PVDF	T
Mérési távolság / Measuring Range/Version	10...90, A0...Z0
Típus / Type	NRE-7
sugárzott mikrohullámú szinttávadó, 80 GHz, integrált változat / Radar Level Transmitter, 80 GHz, integrated version	

Ez a tanúsítvány csak a maga egészében és változatlan formában használható fel, mellékleteivel együtt. /
This certificate may only be reproduced in its entirety and without any change, schedule included.

Lapszám / Page: 4/8





BKI24ATEX0011 X
EU-Típus Vizsgálati Tanúsítvány/
EU-Type Examination Certificate

NRE-4, -6 kompakt kivitelű típusváltozat / compact design

NRE-□ □ □ □ □

Opció / Option nélkül / without	Kód / Code 0
Kimenet/Kijelző/Védelem / Output/Display/Approval	Kód / Code
4-20 mA HART / nélkül/without / ATEX Ex ia GD	A0I
4-20 mA HART + Bluetooth / nélkül/without / ATEX Ex ia GD	B0I
4-20 mA HART / vele/with / ATEX Ex ia GD	A1I
4-20 mA HART + Bluetooth / vele/with / ATEX Ex ia GD	B1I
Technológiai csatlakozás / Process connection	A...Z, A...Z (0...9), A...Z (0...9)
Sugárzó és ház anyaga / Material Antenna (Transducer) / Housing	Kód / Code
PP / PBT (üvegszál erősítésű / glass fibre reinforced)	P
PP / Aluminium	A
PP / Rozsdamentes acél / Stainless steel	D
1,4571 / PBT (üvegszál erősítésű / glass fibre reinforced)	M
1,4571 / Aluminium (hiányos / painted)	S
1,4571 / Rozsdamentes acél / Stainless steel	K
PVDF / PBT (üvegszál erősítésű / glass fibre reinforced)	V
PVDF / Aluminium (hiányos / painted)	B
PVDF / Rozsdamentes acél / Stainless steel	W
PTFE / PBT (üvegszál erősítésű / glass fibre reinforced)	F
PTFE / Aluminium	T
PTFE / Rozsdamentes acél / Stainless steel	L
Kivitel / Version (Design)	Kód / Code
Normál / Standard	S
Magas hőmérsékletű / High temperature	H
Mérési távolság / Measuring range	A...Z (0...9)
Típus / Type	
sugárzott mikrohullámú szinttávadó, 80 GHz, kürt típus, kompakt változat / Radar Level Transmitter, 80 GHz, horn type, compact version	NRE-4
sugárzott mikrohullámú szinttávadó, 80 GHz, tojás típus, kompakt változat / Radar Level Transmitter, 80 GHz, egg type, compact version	NRE-6

15.3 Műszaki adatok / Technical data

NRE-7 integrált kivitelű típusváltozat / integrated design

Általános adatok / General data

Ex jelölés / Ex marking (ATEX)	II 1 G Ex ia IIC T5 Ga	II 1 D Ex ia IIIC T95°C Da
Ex tápegység gyújtószikramentes adatok / Ex power supply, intrinsically safe data (*)	U _i = 30 V, I _i = 100 mA, P _i = 0,75 W	U _i = 30 V, I _i = 140 mA, P _i = 1 W
Tápfeszültség / Supply voltage	12...30 V DC	

(*) IIB alkalmazásnál, a IIIC Ex tápegység adat használható / in IIB applications, Ex power supply data IIIC can be used

Ez a tanúsítvány csak a maga egészében és változatlan formában használható fel, mellékleteivel együtt. /
This certificate may only be reproduced in its entirety and without any change, schedule included.

Lapszám / Page: 5/8



BKI24ATEX0011 X
EU-Típus Vizsgálati Tanúsítvány/
EU-Type Examination Certificate

Gyújtószikramentes (Ex ia) készülékek hőmérséklet határadatai /
Temperature Limit Data for ATEX (Ex ia) Approved Models

Hőmérsékleti adatok / Temperature data	Robbanásveszélyes gáz atmoszféra / Hazardous gas atmosphere	Robbanásveszélyes poros atmoszféra / Hazardous dust atmosphere
	Ex ia IIC	Ex ia IIIC
Hőmérsékleti osztály / Temperature class	T5	T95°C
Legmagasabb környezeti hőmérséklet / Highest ambient temperature	+80 °C (+176 °F)	+80 °C (+176 °F)
Készülék legmagasabb felületi hőmérséklete / Highest surface temperature of the instrument (**)	+80 °C (+176 °F)	+80 °C (+176 °F)

(**) Közeg, környezet vagy technológia csatlakozás által átadott vezetett vagy sugárzott hő következtében /
As a result of conducted or radiated heat transferred by medium, environment or technology connection /

NRE-4, -6 kompakt kivitelű típusváltozat / compact design

Általános adatok / General data

Alkalmazási csoport / Application group		IIC	IIIC
Normál kivitel / Standard version		NRE-xxSxxxxA0I / NRE-xxSxxxxA1I	
Robbanásvédelmi jel / Ex marking (ATEX)		⊕ II 1G Ex ia IIC T6 Ga	⊕ II 1D Ex ia IIIC T85°C Da
Magas Hőmérsékletű kivitel / High Temperature version		NRE-xxHxxxxA0I / NRE-xxHxxxxA1I	
Robbanásvédelmi jel / Ex marking (ATEX)		⊕ II 1G Ex ia IIC T6...T3 Ga	⊕ II 1D Ex ia IIIC T85°C...T180°C Da
Ex tápegység gyújtószikramentes adatok / Ex power supply, intrinsically safe data (***)		U _i = 30 V, I _i = 100 mA, P _i = 0,75 W C _i ≤ 12 nF, L _i ≤ 250 μH	U _i = 30 V, I _i = 140 mA, P _i = 1 W C _i ≤ 12 nF, L _i ≤ 250 μH
Tápfeszültség / Supply voltage		12...30V DC	
Elektromos csatlakozás / Electrical connection	Kábel bevezető / Cable entry	M20x1,5 tömszelence / cable gland	
	Kábel külső átmérő / Cable outer diameter	Ø 6...12 mm (Ø 0,25...0,5")	
	Vezeték keresztmetszet / Wire cross section	0,5...1,5 mm ² (AWG20...15)	

(***) IIB alkalmazásnál, a IIIC Ex tápegység adat használandó / in IIB applications, Ex power supply data IIIC can be used

Gyújtószikramentes (Ex ia) készülékek hőmérséklet határadatai /
Temperature Limit Data for ATEX (Ex ia) Approved Models

Hőmérsékleti adatok / Temperature data	Robbanásveszélyes gáz atmoszféra / Hazardous gas atmosphere NRE-4xSxxxxA0I / NRE-6xSxxxxA0I NRE-4xSxxxxA1I / NRE-6xSxxxxA1I	Robbanásveszélyes poros atmoszféra / Hazardous dust atmosphere NRE-4xHxxxxA0I / NRE-6xHxxxxA0I NRE-4xHxxxxA1I / NRE-6xHxxxxA1I		
	Ex ia IIC, Ex ia IIIC	Ex ia IIC, Ex ia IIIC	Ex ia IIC, Ex ia IIIC	Ex ia IIC, Ex ia IIIC
Hőmérsékleti osztály / Temperature class	T6 T85°C	T5 T100°C	T4 T135°C	T3 T180°C
Legmagasabb közeg hőmérséklet / Highest process temperature	+80 °C (+176 °F)	+100 °C (+212 °F)	+135 °C (+275 °F)	+180 °C (+356 °F)
Legmagasabb felületi hőmérséklet a technológiai csatlakozáson / Highest surface temperature at the process connection	+70 °C (+158 °F)	+100 °C (+212 °F)	+135 °C (+275 °F)	
Legmagasabb környezeti hőmérséklet / Highest ambient temperature	+70 °C (+158 °F)	+70 °C (+158 °F)	+60 °C (+140 °F)	

Ez a tanúsítvány csak a maga egészében és változatlan formában használható fel, mellékleteivel együtt. /
This certificate may only be reproduced in its entirety and without any change, schedule included.

Lapszám / Page: 6/8



BKI24ATEX0011 X
EU-Típus Vizsgálati Tanúsítvány/
EU-Type Examination Certificate

(16) Jegyzőkönyv / Report N°

VA-0021-24-A

ATEX értékelő jelentés / assessment report

2024.06.10.

(17) Biztonságos üzemeltetés feltételei / Special conditions of Use

- A gyújtószikramentes eszközök csak a műszaki előírásoknak megfelelő, [Ex ia IIC] vagy [Ex ia IIB] védelemmel tanúsított és jóváhagyott áramkörökről üzemeltethetők.
- Ha a készüléket túlfeszültségnek kitett helyre telepítik, a készüléket legalább II. osztályú túlfeszültségvédelemmel kell ellátni!
- A készülékház alumíniumötvözet-tartalma meghaladja a határértéket, ezért robbanásveszélyes (Ex) környezetben a berendezést védeni kell az ütési és súrlódási hatásoktól.
- A készülék háza statikus töltést felhalmozni képes anyagból készült! Az elektrosztatikus töltés jelenléte szikraképződés és gyulladás veszélyét hordozza magában, ezért az elektrosztatikus feltöltődést robbanásveszélyes (Ex) környezetben teljesen meg kell akadályozni!
 - A készülék csak töltésátvitelt okozó közvetlen légáramtól és minden egyéb feltöltődést okozó hatástól mentes környezetbe telepíthető. Kivéve, III. alkalmazás csoport esetén abban az esetben, ha a szállópor vezetőképessége nagyobb mint $>10^{-9}$ S ($50\pm5\%$ relatív nedvesség mellett) illetve $>10^{-11}$ S ($30\pm5\%$ relatív nedvesség mellett).
 - Fokozott óvatossággal kell eljárni karbantartás során, amikor is robbanóképes anyagmaradvány lehet a technológiai tartályban. A készüléket robbanásveszélyes (Ex) környezetben megérinteni kizárólag vízzel nedvesített antistatikus törülközővel lehet!

A fenti előírások betartása esetén a zárt technológiai rendszerre tekintettel statikus feltöltődés felhalmozódására nincs lehetőség, így gyulladásveszély sem áll fenn. /

- Intrinsically safe devices can only be operated from circuits that comply with the technical specifications, certified and approved as [Ex ia IIC] or [Ex ia IIB] protection.
- If the device is installed in a location exposed to overvoltage, the device must be equipped with at least Class II overvoltage protection!
- For installation in Zone 0 the aluminum alloy content in the device housing exceeds the limit, so in explosive (Ex) environments, the equipment must be protected against impact and friction effects.
- The housing of the device is made of a material capable of accumulating static charge! The presence of electrostatic charge poses a risk of spark generation and ignition, so electrostatic charging must be completely prevented in explosive (Ex) environments!
 - The device can only be installed in an environment free from direct air streams causing charge transfer and any other charging effects. Except for Group III applications, where the dust conductivity is greater than $>10^{-9}$ S (at $50\pm5\%$ relative humidity) or $>10^{-11}$ S (at $30\pm5\%$ relative humidity).
 - Increased caution is required during maintenance when explosive material residue may be present in the technological tank. The device in explosive (Ex) environments can only be touched with a water-moistened antistatic wipe!

In case of compliance with the above regulations, considering the closed technological system, there is no possibility of static charge accumulation, therefore, there is no ignition hazard.

Ez a tanúsítvány csak a maga egészében és változatlan formában használható fel, mellékleteivel együtt. /
This certificate may only be reproduced in its entirety and without any change, schedule included.

Lapszám / Page: 7/8





BKI24ATEX0011 X
EU-Típus Vizsgálati Tanúsítvány/
EU-Type Examination Certificate

(18) Alapvető egészségügyi és biztonsági követelmények / Essential Health and Safety Requirements

Amellett, hogy az alapvető egészségügyi és biztonsági követelményeknek való megfelelést a 9. pontban felsorolt szabványok biztosítják, a következő megfontolások vonatkoznak a gyártmányra, melyek megfelelősége jegyzőkönyvben bizonyított:

In addition to the Essential Health and Safety Requirements (EHSRs) covered by the standards listed at item 9, the following are considered relevant to this product, and conformity is demonstrated in the report:

Záradék / Clause	Tárgy / Subject
Nem vonatkozik / Not applicable	

(19) Rajzok és dokumentációk / Drawings and Documents

Nr.	Megnevezés / Denomination	Szám / Number	Verzió / Rev	Dátum / Date	Lapszám / Page
1.	Működési előírások / Operating Instructions	NRE-4/NRE-6 K01/0324	-	2024.06.03.	52
2.	Működési előírások / Operating Instructions	NRE-7 K01/0424	-	2024.06.03.	48
3.	Ex-adattábla / Ex data plate (NRE-4/NRE-6)	003.998	-	2024.04.02.	1
4.	Ex-adattábla / Ex data plate (NRE-7)	003.999	-	2024.04.02.	1

ExVA Vizsgáló és Tanúsító Kft.
1037 Budapest, Mikoviny S. u. 2-4
10925306-2-41


Nagy Botond
Tanúsító Szervezet Vezető /
Head of Certification Body

Ez a tanúsítvány csak a maga egészében és változatlan formában használható fel, mellékleteivel együtt. /
This certificate may only be reproduced in its entirety and without any change, schedule included.

Lapszám / Page: 8/8

